

# Operating Instructions

## Fronius Verto

15.0 208-240 / 18.0 208-240

25.0 / 27.0

30.0 / 33.3

36.0 480



EN | Operating Instructions



42,0426,0490,EA

018-29062026



# Table of contents

|                                                                 |           |
|-----------------------------------------------------------------|-----------|
| <b>General information</b>                                      | <b>7</b>  |
| Safety information.....                                         | 9         |
| Explanation of warnings and safety instructions.....            | 9         |
| Safety instructions and important information.....              | 9         |
| Environmental conditions.....                                   | 10        |
| Electromagnetic fields.....                                     | 10        |
| Data on noise emission values.....                              | 11        |
| EMC measures.....                                               | 11        |
| Ground conductor.....                                           | 11        |
| Protection of people and equipment.....                         | 12        |
| Central grid and system protection.....                         | 12        |
| WSD (wired shutdown).....                                       | 12        |
| RCMU.....                                                       | 12        |
| Insulation monitoring.....                                      | 12        |
| AFCI - Arc Fault Circuit Interrupter (Arc Guard).....           | 12        |
| Safe state.....                                                 | 13        |
| General.....                                                    | 14        |
| Information on the device.....                                  | 14        |
| How information is presented in the document.....               | 15        |
| Target group.....                                               | 15        |
| Data security.....                                              | 15        |
| Privacy policy.....                                             | 16        |
| Copyright.....                                                  | 17        |
| Fronius Verto.....                                              | 18        |
| Device concept.....                                             | 18        |
| Scope of supply.....                                            | 18        |
| Backup Power Boost.....                                         | 18        |
| Thermal concept.....                                            | 19        |
| Fronius Solar.web.....                                          | 19        |
| Local communication.....                                        | 20        |
| Utilization in accordance with "intended purpose".....          | 21        |
| Intended use.....                                               | 21        |
| Foreseeable misuse.....                                         | 21        |
| Provisions for the photovoltaic system.....                     | 21        |
| Surge protection device (SPD).....                              | 22        |
| Surge protection device SPD.....                                | 22        |
| Operating controls and connections.....                         | 23        |
| Connection area.....                                            | 23        |
| PV connections.....                                             | 24        |
| Ground electrode bolt.....                                      | 24        |
| Mounting option for third-party components.....                 | 24        |
| DC disconnect.....                                              | 25        |
| Data communication area.....                                    | 25        |
| Button functions and LED status indicator.....                  | 26        |
| Schematic internal wiring of IOs.....                           | 28        |
| <b>Installation</b>                                             | <b>29</b> |
| General.....                                                    | 31        |
| Tools required.....                                             | 31        |
| Quick-fastener system.....                                      | 31        |
| System component compatibility.....                             | 32        |
| Installation location and position.....                         | 33        |
| Choosing the location of the inverter.....                      | 33        |
| Installation position of inverter.....                          | 34        |
| Installing the mounting bracket and attaching the inverter..... | 35        |
| Selecting the mounting material.....                            | 35        |

|                                                                                  |    |
|----------------------------------------------------------------------------------|----|
| Properties of the mounting bracket.....                                          | 35 |
| Do not deform the mounting bracket.....                                          | 35 |
| Fitting the mounting bracket to a wall.....                                      | 35 |
| Attaching the inverter to the mounting bracket.....                              | 36 |
| Requirements for connecting the inverter.....                                    | 37 |
| Connecting aluminum cables.....                                                  | 37 |
| Different cable types.....                                                       | 37 |
| Permitted cables for the electrical grid connection.....                         | 37 |
| Permitted cables for the electrical DC connection.....                           | 38 |
| Permitted cables for the data communication connection.....                      | 38 |
| Cable diameter of the AC cable.....                                              | 38 |
| Maximum alternating current fuse protection.....                                 | 39 |
| Connecting the inverter to the public grid (AC side).....                        | 40 |
| Safety.....                                                                      | 40 |
| Connecting the inverter to the public grid (AC side).....                        | 40 |
| Connecting the inverter to the public grid with the PEN conductor (AC side)..... | 43 |
| Replacing the PG screw joint.....                                                | 45 |
| Connecting solar module strings to the inverter.....                             | 46 |
| General information about PV modules.....                                        | 46 |
| Safety.....                                                                      | 46 |
| PV Generator, general.....                                                       | 47 |
| Connecting solar module strings to the inverter.....                             | 47 |
| Connecting the data communication cables.....                                    | 49 |
| Modbus participants.....                                                         | 49 |
| Routing data communication cables.....                                           | 49 |
| Installing the WSD (wired shutdown).....                                         | 51 |
| Closing and commissioning the inverter.....                                      | 53 |
| Closing the inverter's connection area/housing cover, and commissioning.....     | 53 |
| Starting the inverter for the first time.....                                    | 53 |
| Installation with the app.....                                                   | 54 |
| Installation with the browser.....                                               | 54 |
| De-energizing the inverter and switching it back on.....                         | 56 |
| Risk of rupture.....                                                             | 56 |
| De-energizing the inverter and switching it back on.....                         | 56 |

## **Settings - User interface of the inverter 57**

|                                   |    |
|-----------------------------------|----|
| User settings.....                | 59 |
| User login.....                   | 59 |
| Selecting languages.....          | 59 |
| Device configuration.....         | 60 |
| Components.....                   | 60 |
| Functions and I/Os.....           | 60 |
| Inverter.....                     | 61 |
| System.....                       | 65 |
| General.....                      | 65 |
| Update.....                       | 65 |
| Setup wizard.....                 | 65 |
| Restoring factory settings.....   | 65 |
| Event log.....                    | 65 |
| Information.....                  | 65 |
| License Manager.....              | 65 |
| Licensing.....                    | 66 |
| Support.....                      | 66 |
| Communication.....                | 68 |
| Network.....                      | 68 |
| Modbus.....                       | 69 |
| Cloud control.....                | 71 |
| Solar API.....                    | 71 |
| Fronius Solar.web.....            | 71 |
| Safety and grid requirements..... | 73 |
| Country setup.....                | 73 |

|                                                                    |    |
|--------------------------------------------------------------------|----|
| Requesting inverter codes in Solar.SOS.....                        | 73 |
| Absolute Generation Limit.....                                     | 74 |
| Import limitation.....                                             | 74 |
| Feed-in limit.....                                                 | 74 |
| Feed-in limit – examples.....                                      | 76 |
| Multiple Inverter Control.....                                     | 77 |
| I/O Power Management.....                                          | 80 |
| 4-relay connection example.....                                    | 82 |
| I/O power management settings – 4 relay example.....               | 83 |
| 3-relay connection example.....                                    | 83 |
| I/O power management settings – 3 relay example.....               | 85 |
| 2-relay connection example.....                                    | 85 |
| I/O power management settings – 2 relay example.....               | 87 |
| 1-relay connection example.....                                    | 87 |
| I/O power management settings – 1 relay example.....               | 89 |
| Connecting the ripple control receiver with several inverters..... | 89 |

## Appendix

**91**

|                                                                |     |
|----------------------------------------------------------------|-----|
| Service, maintenance and disposal.....                         | 93  |
| General.....                                                   | 93  |
| Maintenance.....                                               | 93  |
| Cleaning.....                                                  | 93  |
| Operation in dusty environments.....                           | 93  |
| Safety.....                                                    | 94  |
| Disposal.....                                                  | 94  |
| Warranty provisions.....                                       | 96  |
| Warranty.....                                                  | 96  |
| Status codes and remedy.....                                   | 97  |
| Display.....                                                   | 97  |
| Status codes.....                                              | 97  |
| Technical data.....                                            | 98  |
| Verto 15.0 208-240.....                                        | 98  |
| Verto 18.0 208-240.....                                        | 99  |
| Verto 25.0.....                                                | 101 |
| Verto 27.0.....                                                | 103 |
| Verto 30.0.....                                                | 105 |
| Verto 33.3.....                                                | 106 |
| Verto 36.0 480.....                                            | 108 |
| Protection devices.....                                        | 110 |
| WLAN.....                                                      | 110 |
| Data communication.....                                        | 110 |
| Surge protection device DC Verto 25.0-27.0 SPD type 1+2.....   | 111 |
| Surge protection device DC Verto 25.0 - 27.0 SPD type 2.....   | 111 |
| Surge protection device DC Verto 30.0 - 33.3 SPD type 1+2..... | 112 |
| Surge protection device DC Verto 30.0 - 33.3 SPD type 2.....   | 112 |
| Explanation of footnotes.....                                  | 113 |
| Integrated DC disconnect.....                                  | 113 |



# **General information**



# Safety information

## Explanation of warnings and safety instructions

**Warnings** are intended to warn people of possible injuries and to avoid personal injury and damage to the product. They relate to individual actions with and on the product.



### DANGER

**Indicates an immediately dangerous situation.**

Serious injury or death will result if the danger is not avoided.

- Action step to escape the situation.



### WARNING

**Indicates a potentially dangerous situation.**

Serious injury or death may result if the danger is not avoided.

- Action step to escape the situation.



### CAUTION

**Indicates a potentially dangerous situation.**

Minor or moderate injury may result if the danger is not avoided.

- Action step to escape the situation.

### NOTE

**Indicates a situation that may result in property damage.**

If the situation is not avoided, impaired work results, material damage to the product or other property are the possible consequences.

- Action step to avoid the situation.

**Safety instructions** are designed to ensure safe product use. They are preventive and help to inform users about the fundamental risks involved when dealing with the product. They do not refer specifically to individual actions with and on the product.

## Safety instructions and important information

The device has been manufactured in line with the state of the art and according to recognized safety standards.



### WARNING

**Incorrect operation or misuse**

Serious to fatal injuries to the operator or third parties as well as damage to the device and other property of the operator may result.

- All persons involved in the commissioning, maintenance, and servicing of the device must be appropriately qualified and have knowledge of working with electrical installations.
- Read these operating instructions in full and follow them carefully and precisely.
- The operating instructions must always be kept to hand wherever the device is being used.

**IMPORTANT!**

In addition to the operating instructions, observe the following general and local rules:

- Accident prevention
- Fire protection
- Environmental protection

**IMPORTANT!**

Labels, warning notices, and safety symbols are located on the device. A description can be found in these operating instructions.

**IMPORTANT!**

All safety and danger notices on the device:

- Must be kept in a legible state
- Must not be damaged/marked
- Must not be removed
- Must not be covered, have anything stuck on them, or painted over

**WARNING****Tampered-with and non-functioning protection devices**

Serious to fatal injuries as well as damage to the device and other property of the operator may result.

- ▶ Never bypass or disable protection devices.
- ▶ Any protection devices that are not fully functional must be repaired by an authorized specialist before the device is switched on.

**WARNING****Loose, damaged, or under-dimensioned cables**

An electric shock can be fatal.

- ▶ Use undamaged, insulated, and adequately dimensioned cables.
- ▶ Fasten the cables according to the specifications in the operating instructions.
- ▶ Loose, damaged, or under-dimensioned cables must be repaired or replaced immediately by an authorized specialist.

**NOTE****Installations or modifications to the device**

The device may be damaged

- ▶ Do not carry out any alterations, installations, or modifications to the device without first obtaining the manufacturer's permission.
- ▶ Damaged components must be replaced.
- ▶ Only use original spare parts.

---

**Environmental conditions**

Operation or storage of the machine outside the stipulated area will be deemed as not in accordance with the intended purpose.

For exact information on permitted environmental conditions, please refer to the technical data.

---

**Electromagnetic fields**

During operation, due to the high electrical voltages and currents, local electromagnetic fields (EMF) are generated. These occur in the immediate vicinity of

the inverter and the Fronius system components. Electromagnetic fields are also present in the area of the PV modules and their supply lines.

As long as the intended use and a minimum distance of 20 cm are observed, all limit values for human exposure are observed.

If the limit values are complied with, according to current scientific knowledge, no negative health effects from EMF exposure are to be expected. For persons with prostheses<sup>1)</sup> or active physical aids<sup>2)</sup>, there is a possible health risk in the vicinity of photovoltaic system components. To avoid possible health risks, consult with the responsible doctor.

<sup>1)</sup> e.g., implants or metal parts

<sup>2)</sup> e.g., pacemaker, insulin pump, hearing aid, etc.

---

**Data on noise emission values**

The sound pressure level of the inverter is indicated in the [Technical data](#).

The cooling of the device takes place via an electronic temperature control system at the lowest possible noise level and depends on the power used, ambient temperature, and the soiling level of the device, etc.

It is not possible to provide a workplace-related emission value for this device, because the actual sound pressure level is heavily influenced by the installation situation, the power quality, the surrounding walls, and the properties of the room in general.

---

**EMC measures**

In certain cases, even though a device complies with the standard limit values for emissions, it may affect the application area for which it was designed (e.g., when there is equipment that is susceptible to interference at the same location or if the site where the device is installed is close to either radio or television receivers). If this is the case, the operator is obliged to take action to rectify the situation.

---

**Ground conductor**

Connection of a point in the device, system, or installation to ground to protect against electric shock in the event of a fault. When installing an inverter from safety class 1 (see [Technical data](#)), a ground conductor connection is required.

When connecting the ground conductor, ensure that it is secured to prevent unintentional disconnection. All of the points listed in the chapter headed [Connecting the inverter to the public grid \(AC side\)](#) on page 40 must be observed. When using cable glands, ensure that the ground conductor is last to be subjected to a load in the event of a failure of the cable gland. The respective national standards and regulations and requirements for minimum cross-section must be observed when connecting the ground conductor.

# Protection of people and equipment

## Central grid and system protection

The inverter offers the option to use the integrated AC relays as section switches in conjunction with a central grid and system protection unit (in accordance with VDE-AR-N 4105:2018:11 §6.4.1). For this purpose, the central trigger device (switch) must be integrated into the WSD chain as described in chapter [WSD \(wired shutdown\)](#) on page 12.

## WSD (wired shutdown)

The wired shutdown (WSD) interrupts the inverter's grid power feed if the trigger device (switch, e.g., Emergency Stop or fire alarm contact) has been activated.

If an inverter (slave) fails, it is bypassed and the other inverters continue operating. If a second inverter (slave) or the inverter (master) fails, the operation of the entire WSD chain is interrupted.

For installation, see [Installing the WSD \(wired shutdown\)](#) on page 51.

## RCMU

The inverter is equipped with an RCMU (RCMU = residual current monitoring unit) according to IEC 62109-2 and IEC63112. It monitors residual currents from the PV module up to the AC output and disconnects the inverter from the grid when an improper residual current is detected.

## Insulation monitoring

In the case of photovoltaic systems with ungrounded PV modules, the inverter checks the resistance between the positive or negative pole of the photovoltaic system and the ground potential before starting grid power feed operation. In the event of a short circuit between the DC+ or DC- cable and ground (e.g., due to inadequately insulated DC cables or defective PV modules), feeding into the public grid is prevented.

## AFCI - Arc Fault Circuit Interrupter (Arc Guard)

An AFCI (Arc Fault Circuit Interrupter) protects against arc faults and is a protective device in the event of contact errors. The Arc Fault Circuit Interrupter monitors faults that occur in the current and voltage flow on the DC side and shuts down the circuit with an electronic circuit if a contact error is detected. The function prevents overheating at poor contact points and, ideally, possible fires. In the [Technical data](#) chapter, check whether the Arc Fault Circuit Interrupter is available for the device in question.



### CAUTION

#### Faulty or incorrect DC installation

Arcs lead to prohibited thermal loads on the DC installation. There is a risk of fire. This may result in injury and damage to the inverter and the components of the photovoltaic system.

- ▶ Check the plug connections to ensure that they are correct.
- ▶ Repair faulty insulation correctly.
- ▶ Perform connection work in line with the instructions.

**IMPORTANT!**

Fronius will not bear any costs that may arise due to a detected electric arc and its consequences. Fronius accepts no liability for damage which may occur despite the integrated Arc Fault Circuit Interrupter/interruption (e.g., due to a parallel arc).

**IMPORTANT!**

Active PV module electronics (e.g., power optimizers) can impair the function of the Arc Fault Circuit Interrupter. Fronius cannot guarantee the correct function of the Arc Fault Circuit Interrupter in combination with active PV module electronics.

**Reconnection behavior**

Grid power feed operation is interrupted for at least 5 minutes after an arc has been detected. Depending on the configuration, grid power feed operation is then automatically resumed. If several arcs occur within a period of 24 hours, grid power feed operation will remain interrupted until a manual reconnection is performed.

---

**Safe state**


In the safe state, the inverter infeed is deactivated and is disconnected from the grid by the AC relay opening. The inverter switches to the safe state when the following events occur:

1. One of the following safety devices triggers:
  - WSD
  - Insulation monitoring
  - RCMU
  - AFCI
2. The diagnostic function of the inverter detects a malfunction of these safety devices.

# General

## Information on the device

Technical data, warning notices, labels, and safety symbols are located on and in the inverter. This information must be kept in a legible condition and must not be removed, covered, pasted over, or painted over. They warn against incorrect operation, which may result in serious injury and property damage.

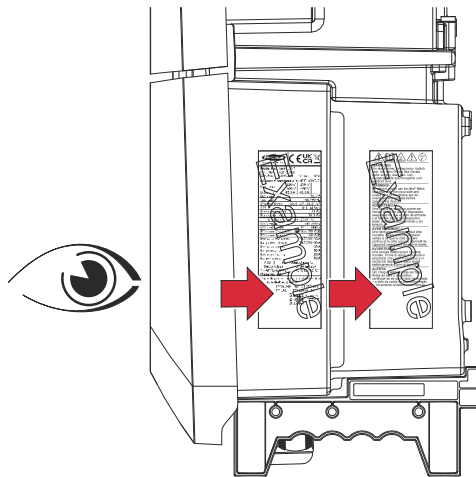

### Symbols on the rating plate:



CE label – confirms compliance with applicable EU directives and regulations.



WEEE marking – waste electrical and electronic equipment must be collected separately and recycled in an environmentally sound manner in accordance with the European Directive and national law.

### Safety symbols:



Integrated switch disconnect on the input side of the inverter with switch-on, switch-off, and isolating function according to IEC 60947-3 and AS 60947.3. The values required by the applicable standard for  $I_{th}$  solar +60°C are given.



#### General warning sign

Observe the danger shown on the additional sign(s).



#### Observe instructions

Do not use the functions described here until you have fully read and understood the following documents:

- These operating instructions, especially the safety rules.
- Read and understand all operating instructions for the system components of the photovoltaic system, especially the safety rules.



#### Warning of hot surface

Take care not to come into contact with hot surfaces.



#### Warning of electrical voltage

Take care not to come into contact with electrical voltage.



Allow the capacitors of the inverter to discharge (2 minutes).

### Warning notice text:

#### WARNING!

An electric shock can be fatal. Before opening the device, ensure that the input and output sides are de-energized and disconnected.

---

**How information is presented in the document**

The conventions regarding how information is presented in the document, which are set out below, have been defined in order to increase the readability and comprehensibility of the document.

**Application notes**

**IMPORTANT!** Indicates application notes and other useful information. It does not indicate a harmful or dangerous situation.

**Software**

Software functions and elements of a graphical user interface (e.g., buttons, menu items) are highlighted in the text with this **mark up**.

Example: Click **Save**.

**Instructions for action**

**1** Action steps are displayed with consecutive numbering.

- ✓ *This symbol indicates the result of the action step or the entire instruction.*

---

**Target group**

This document provides detailed information and instructions to ensure that people can use the machine safely and efficiently.

The information is intended for the following groups of people:

- **Technical specialists:** People with appropriate qualifications and fundamental knowledge of electronics and mechanics. The activities of a technical specialist include installation, operation, maintenance, and service work.
- **User:** People that use the machine in daily operation and want to understand its basic functions.

Regardless of any qualifications, only perform the activities listed in this document.

The definition of professional qualifications and their applicability are subject to national law.

---

**Data security**

With regard to data security, the user is responsible for:

- Backing up any changes made to the factory settings
- Saving and storing personal settings

## NOTE

### Data security for network and Internet connection

Unsecured networks and a lack of safeguards can result in data loss and unauthorized access. Observe the following points for safe operation:

- ▶ Operate inverters and system components on a private, secure network. A WiFi network is considered secure if security standard WPA 2 is satisfied as a minimum.
- ▶ Keep the network devices (e.g., WiFi routers) up to date with the latest technology.
- ▶ Keep the software and/or firmware updated.
- ▶ Use a wired network to ensure a stable data connection.
- ▶ For security reasons, do not make inverters and system components accessible from the Internet via port forwarding or Port Address Translation (PAT).
- ▶ Use the solutions provided by Fronius for monitoring and remote configuration.
- ▶ The optional communication protocol Modbus TCP/IP<sup>1)</sup> is an unsecured interface. Only use Modbus TCP/IP if no other secured data communication protocol (MQTT<sup>2)</sup>) is possible (e.g., compatibility with older Smart Meters).

<sup>1)</sup> TCP/IP - Transmission Control Protocol/Internet Protocol

<sup>2)</sup> MQTT - Message Queuing Telemetry Protocol

## Privacy policy

When you connect your device (and any associated devices) to the internet, the following device and operating data (device ID/identifier, device IP address, device time, configuration settings, hardware and software information, device status log files, serial number) is sent automatically to

Fronius International GmbH, Froniusstraße 1, 4643 Pettenbach, Austria, telephone +43(0) 7242241-0, email: [contact@fronius.com](mailto:contact@fronius.com) (controller)

and stored.

The processing of this device and operating data is carried out for the purpose of ensuring the operational safety of the device (time synchronization, provision of updates). This processing is therefore necessary for the functionality of the device and thus for the fulfillment of the contract (Art. 6 (1) (b) GDPR).

If you do not wish to have such data processed, you must manually disable the device's internet connection.

In addition, the device and operating data is also processed for the purpose of providing services as part of a supplementary digital service for your device (such as solar.web or similar) as soon as you have registered your device with such a digital service (identification). This data is processed to provide the requested digital services and is therefore necessary for the fulfillment of the contract (Art. 6 (1) (b) GDPR).

Furthermore, this data processing is also carried out for maintenance and support purposes and for handling customer concerns as well as in warranty and guarantee cases (only in individual cases and given connection between device and internet). In this context, the device and operating data may also be passed on to our cooperation partners (third-party providers and suppliers). The processing of this data is necessary for maintenance and support purposes or for processing warranty and guarantee cases and thus for the fulfillment of the contract (Art. 6 (1) (b) GDPR).

Device and operating data are also processed for analysis and diagnostic purposes in order to gain insights into the functionality of the devices and improve them accordingly. This data processing is based on our legitimate interest (Art. 6 (1) (f) GDPR).

We store this data for as long as it is necessary to fulfill the existing contract with you. Any storage beyond this is carried out for legal reasons or if we have a legitimate interest in doing so. For more information on data processing for the solar.web-digital service, as well as our general privacy policy and your rights as a data subject, please visit <https://www.fronius.com>.

---

**Copyright**

Fronius International GmbH retains the copyrights of these operating instructions.

Text, illustrations, and other media correspond to the technical state of the art at the time of publication. Fronius reserves the right to make changes. If you have any suggestions for improvement or have found a mistake in this document, we would be most grateful for your comments.

# Fronius Verto

---

## Device concept

The inverter transforms the direct current generated by the solar modules into alternating current. This alternating current is fed into the public grid and synchronized with the mains voltage in use.

The inverter is intended for use in grid-connected photovoltaic systems.

The inverter automatically monitors the public grid. Whenever conditions in the electric grid are inconsistent with standard conditions (for example, grid switch-off, interruption), the inverter will immediately stop producing power and interrupt the supply of power into the grid.


The grid is monitored by monitoring the voltage, frequency, and islanding conditions.

After installation and commissioning, the inverter's operation is fully automatic; the inverter draws the maximum possible power from the PV modules. Depending on the operating point, this power is used in the home or fed into the grid.

When its temperature gets too high, the inverter automatically reduces the output power or switches off completely, in order to protect itself. Reasons for the temperature being too high include a high ambient temperature or insufficient heat dissipation (for example, inadequate heat dissipation when installed in switch cabinets).

---

## Scope of supply

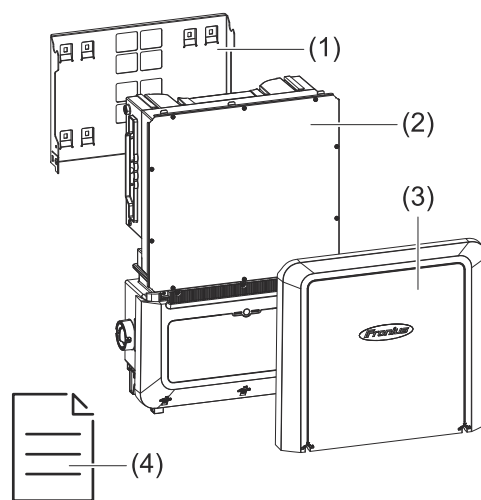


- (1) Mounting bracket (mounted on inverter on delivery)
- (2) Inverter
- (3) Housing cover
- (4) Quick Start Guide

---

## Backup Power Boost


With the "Backup Power Boost" function, the inverter can provide increased power for a short time in backup power mode in order to reliably supply even power-intensive loads.

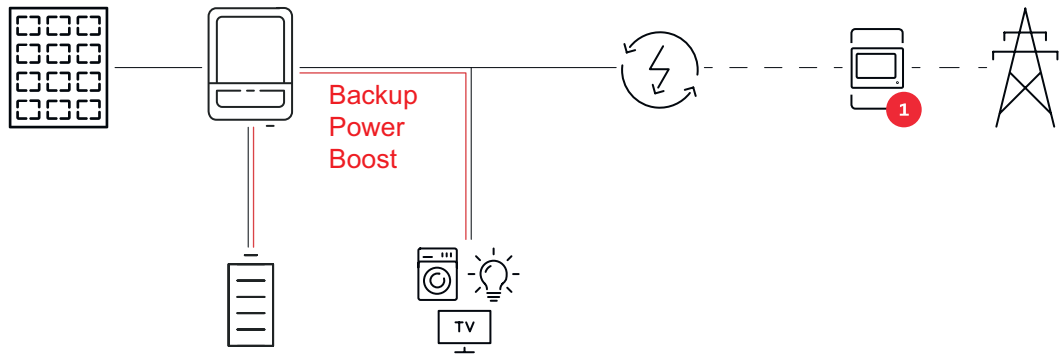

| Power category | Max. DC power * | Max. output current / phase *        |
|----------------|-----------------|--------------------------------------|
| 15.0           | 30 kVA          | 43.5 A (3 phases) / 32 A (1 phase)   |
| 17.5           | 30 kVA          | 43.5 A (3 phases) / 32 A (1 phase)   |
| 20.0           | 30 kVA          | 43.5 A (3 phases) / 32 A (1 phase)   |
| 25.0           | 50 kVA          | 72.5 A (3 phases) / 72.5 A (1 phase) |
| 30.0           | 50 kVA          | 72.5 A (3 phases) / 72.5 A (1 phase) |
| 33.3           | 50 kVA          | 72.5 A (3 phases) / 72.5 A (1 phase) |

\* Sufficient PV and battery power required. Duration max. 5-10 seconds, 400 V AC symmetrical, depending on the environmental conditions.

## Thermal concept

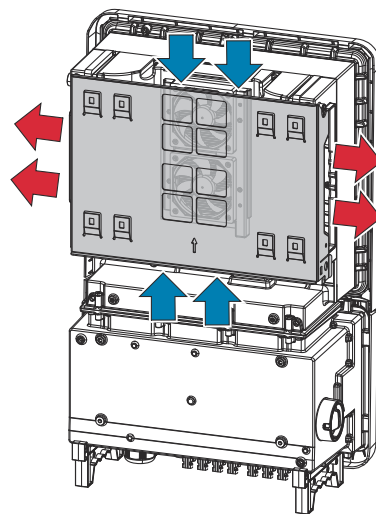

Ambient air is drawn in by the fan on the top and bottom and blown out at the device sides. The even heat dissipation allows several inverters to be installed next to each other.

### NOTE

#### Risk due to insufficient cooling of the inverter.

This may result in a loss of power in the inverter.

- Do not block the fan (for example, with objects that protrude through the touch guard).
- Do not cover the ventilation slots, even partially.
- Make sure that the ambient air can always flow through the inverter's ventilation slots unimpeded.

figuration, the inverter transmits data such as power, yield, load, and energy balance to Fronius Solar.web. More detailed information can be found at [Solar.web - Monitoring & analysis](#).

Configuration is carried out via the Setup wizard, see chapter [Installation with the app](#) or [Installation with the browser](#).

**Requirements for configuration:**

- Internet connection (download: min. 512 kbit/s, upload: min. 256 kbit/s)\*.
  - User account at [solarweb.com](#).
  - Completed configuration using the Setup wizard.
- \* These specifications do not provide an absolute guarantee of flawless operation. High error rates in the transmission, fluctuating receptions or misfires can have an adverse effect on data transfer. Fronius recommends on-site testing to ensure that the connections meet the minimum requirements.

---

**Local communication**

The inverter can be found via the Multicast DNS (mDNS) protocol. We recommend searching for the inverter using the assigned host name.

The following data can be called up via mDNS:

- NominalPower
- Systemname
- DeviceSerialNumber
- SoftwareBundleVersion

# Utilization in accordance with "intended purpose"

---

## **Intended use**

The inverter is designed to convert direct current from PV modules into alternating current and feed this power into the public grid.

Intended use also means:

- Carefully reading and following all the instructions as well as complying with the safety and danger notices in the operating instructions
- Installation in accordance with the chapter headed "[Installation](#)", from page [29](#)

Follow all grid operator regulations regarding energy fed into the grid and connection methods.

---

## **Foreseeable misuse**

The following circumstances are considered to be reasonably foreseeable misuse:

- Any use that is not the intended use or goes beyond the intended use.
  - Alterations to the inverter that are not expressly recommended by Fronius.
  - Installation of components that are not expressly recommended or sold by Fronius.
- 

## **Provisions for the photovoltaic system**

The inverter is designed exclusively to be connected and used with PV modules. Use with other DC generators (e.g., wind generators) is not permitted.


When configuring the photovoltaic system, make sure that all photovoltaic system components are operating exclusively within their permitted operating range.

All measures recommended by the PV module manufacturer for maintaining the PV module properties must be followed.

# Surge protection device (SPD)

---

## Surge protection device SPD



The surge protection device (SPD) protects against temporary over-voltages and diverts surge currents (e.g., lightning strike). Based on an overall lightning protection concept, the SPD contributes to the protection of the photovoltaic system components.

If the surge protection device is triggered, the color of the indicator changes from green to red (mechanical display).

A triggered SPD must be replaced with a fully functional SPD immediately by an authorized specialist company in order to maintain the full protective function of the device.

It is possible to enable the option of digitally displaying the triggering of an SPD. If you wish to set this function, refer to the PDF "SPD Triggering / Temporary SPD Triggering" in the Service & Support area at [www.fronius.com](http://www.fronius.com)

### **IMPORTANT!**

After setting the function described above, the inverter also responds if the 2-pole signal cable of the surge protection device is damaged or is subject to an interruption.


The following components can be used to replace existing AC SPDs with type 1+2 products:

- CITEL - DAC1-13S-31-275 (for mains voltages of 380–400 V)
- CITEL - DAC1-13S-31-320 (for mains voltages of 440–480 V)

Note: Replacing a device does not automatically result in replacement of the existing SPDs.


# Operating controls and connections

## Connection area

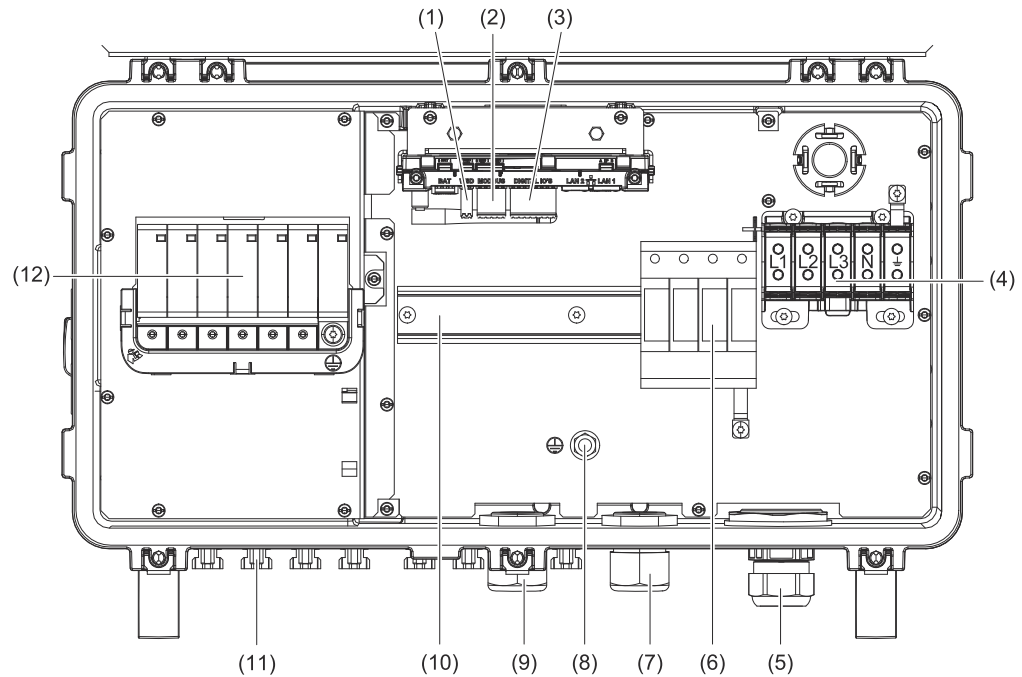


- (1) Push-in WSD (wired shutdown) terminal
- (2) Push-in terminals in the data communication area (Modbus)
- (3) Push-in terminals in the data communication area (digital inputs and outputs)
- (4) 5-pin AC terminal  
⊕ = ⊖
- (5) Cable bushing/cable gland AC
- (6) AC SPD (surge protection device)
- (7) Optional cable bushing
- (8) Grounding clamping bolts
- (9) Cable bushing/cable gland in the data communication area
- (10) DIN rail (mounting option for third-party components)
- (11) DC connections MC4
- (12) DC SPD (surge protection device)

## PV connections

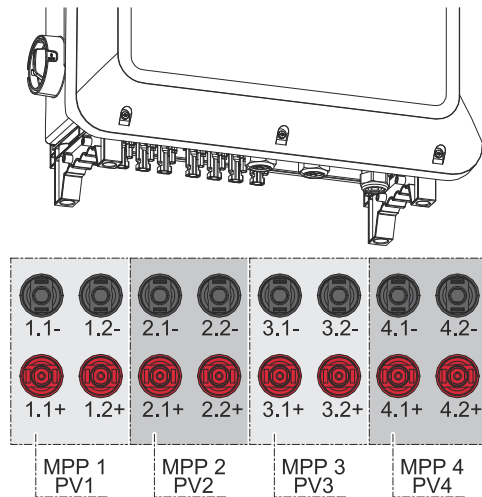

## Ground electrode bolt

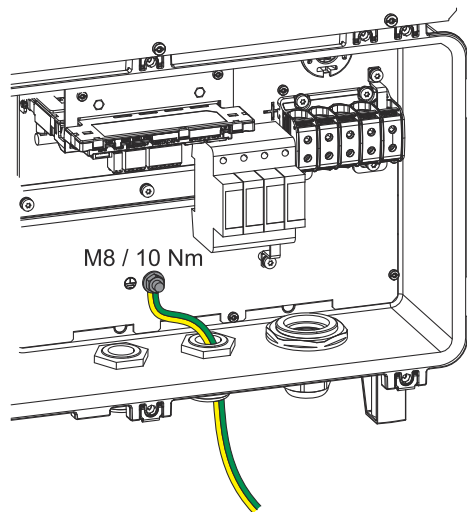


The ground electrode bolt  allows additional components to be grounded, such as:

- AC cable
- Module mounting system
- Ground rod


If further grounding options are required, suitable terminals can be fitted to the DIN rail.

## Mounting option for third-party components

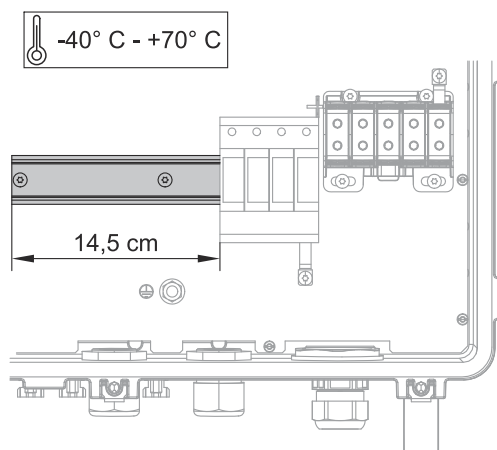

In the connection area there is space for mounting third-party components. Components up to a maximum width of 14.5 cm (8 DU) can be mounted on the DIN rail. The components must have a temperature resistance of -40 °C to +70 °C.

## DC disconnect

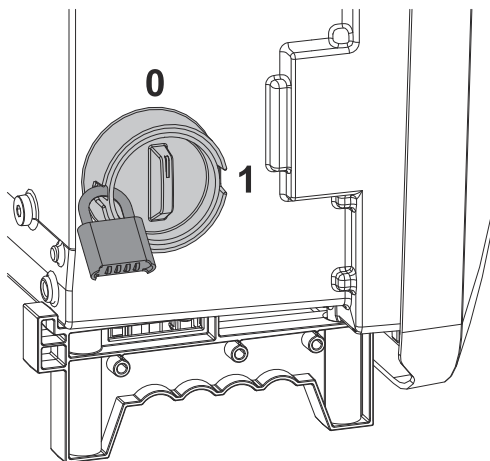

The DC disconnect has 2 switch settings: 1 (On) / 0 (Off).


### Protection against unintentional switching on:

When the switch is in the 0 (Off) position, a conventional padlock can be used to secure the inverter against being switched on. The national guidelines must be complied with in this respect.

Padlock minimum requirement:

- Shackle diameter min. 6 mm
- Housing size min. 40 mm


## Data communication area

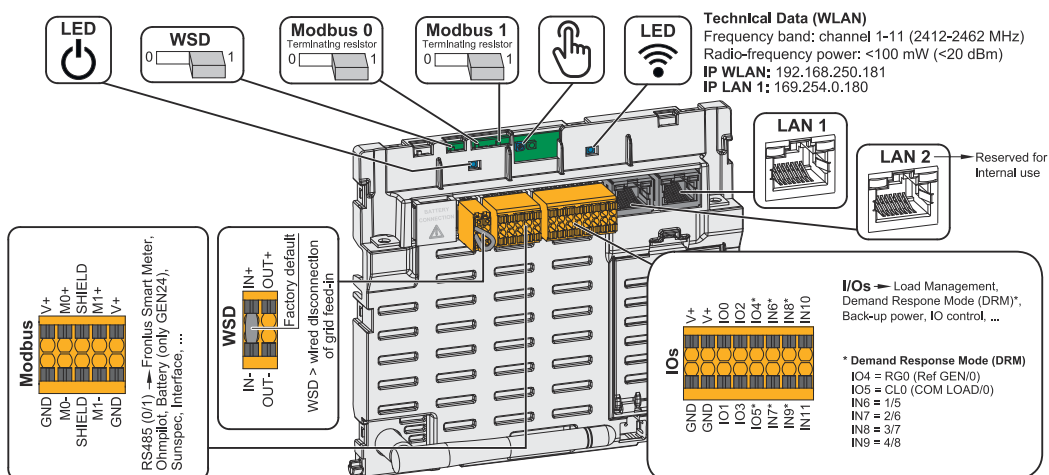

|                                    |                                                                                                                                                                                 |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operating LED</b>               | Indicates the inverter operating status.                                                                                                                                        |
| <b>WSD (wired shutdown) switch</b> | Defines the inverter as the WSD master or WSD slave.<br><br><b>Position 1:</b> WSD master<br><b>Position 0:</b> WSD slave                                                       |
| <b>Modbus 0 (MB0) switch</b>       | Switches the terminating resistor for Modbus 0 (MB0) on/off.<br><br><b>Position 1:</b> Terminating resistor on (factory setting)<br><b>Position 0:</b> Terminating resistor off |
| <b>Modbus 1 (MB1) switch</b>       | Switches the terminating resistor for Modbus 1 (MB1) on/off.<br><br><b>Position 1:</b> Terminating resistor on (factory setting)<br><b>Position 0:</b> Terminating resistor off |

|                                                                                                             |                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <b>Optical sensor</b>     | For operating the inverter. See chapter <a href="#">Button functions and LED status indicator</a> on page 26.                                                                                                                                                                                                                             |
|  <b>Communications LED</b> | Indicates the inverter connection status.                                                                                                                                                                                                                                                                                                 |
| <b>LAN 1</b>                                                                                                | Ethernet connection for data communication (e.g., WiFi router, home network or, for commissioning with a laptop, see chapter <a href="#">Installation with the browser</a> on page 54).                                                                                                                                                   |
| <b>LAN 2</b>                                                                                                | Reserved for future functions. To avoid malfunctions, only use LAN 1.                                                                                                                                                                                                                                                                     |
| <b>I/O terminal</b>                                                                                         | Push-in terminal for digital inputs/outputs. See chapter <a href="#">Permitted cables for the data communication connection</a> on page 38.<br>The designations (RG0, CL0, 1/5, 2/6, 3/7, 4/8) relate to the Demand Response Mode function, see chapter <a href="#">Functions and I/Os</a> on page 60.                                    |
| <b>WSD terminal</b>                                                                                         | Push-in terminal for the WSD installation. See chapter <a href="#">WSD (wired shut-down)</a> on page 12.                                                                                                                                                                                                                                  |
| <b>Modbus terminal</b>                                                                                      | Push-in terminal for the installation of Modbus 0, Modbus 1, 12 V, and GND (ground).<br><br>The data connection to the connected components is established via the Modbus terminal. <b>The inputs M0 and M1 can be freely selected.</b> Max. 4 Modbus participants per input; see chapter <a href="#">Modbus participants</a> on page 49. |

## Button functions and LED status indicator

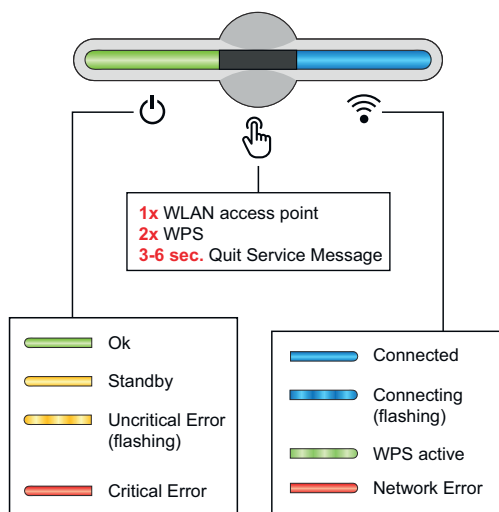

The operating status LED displays the status of the inverter. In case of faults, follow the individual steps in the Fronius Solar.web live app.




The optical sensor is actuated by touching it with a finger.




The communications LED displays the connection status. To establish a connection, follow the individual steps in the Fronius Solar.web live app.

## Sensor functions




1x = WLAN access point (AP) is opened.

Flashes blue



2x = WLAN protected setup (WPS) is activated.


Flashes green



3 seconds (max. 6 seconds) = The service message disappears.


Flashes white (quickly)

## LED status indicator




The inverter is operating correctly.

Lights up green




The inverter is starting.

Flashes green




The inverter is on standby, is not operating (e.g., no energy fed into the grid at night), or is not configured.

Lights up yellow




The inverter displays a non-critical status.

Flashes yellow




The inverter displays a critical status and no energy is fed into the grid.

Lights up red




The network connection is being established via WPS.  
2x = WPS search mode.

Flashes green




The network connection is being established via WLAN AP.  
1x = WLAN AP search mode (active for 30 minutes).

Flashes blue



The network connection is not configured.


Lights up yellow



A network error is displayed, the inverter is operating correctly.


Lights up red

## LED status indicator



The inverter is performing an update.

⏻ / 📶 Flash blue



There is a service message.

👆 Lights up white

## Schematic internal wiring of IOs

The V+/ GND pin provides the possibility of feeding in a voltage in the range of 12.5 to 24 V (+ max. 20%) using an external power supply unit. Outputs IO 0 - 5 can then be operated using the external voltage that has been fed in. A maximum of 1 A may be drawn per output, whereby a total of max. 3 A is permitted. The fuse protection must take place externally.

### ⚠ CAUTION


**Danger from polarity reversal at the terminals due to improper connection of external power supply units.**

This may result in severe damage to the inverter.

- ▶ Check the polarity of the external power supply unit with a suitable measuring device before connecting it.
- ▶ Connect the cables to the V+/GND outputs while ensuring the correct polarity.

### IMPORTANT!

If the total output (6 W) is exceeded, the inverter switches off the entire external power supply.

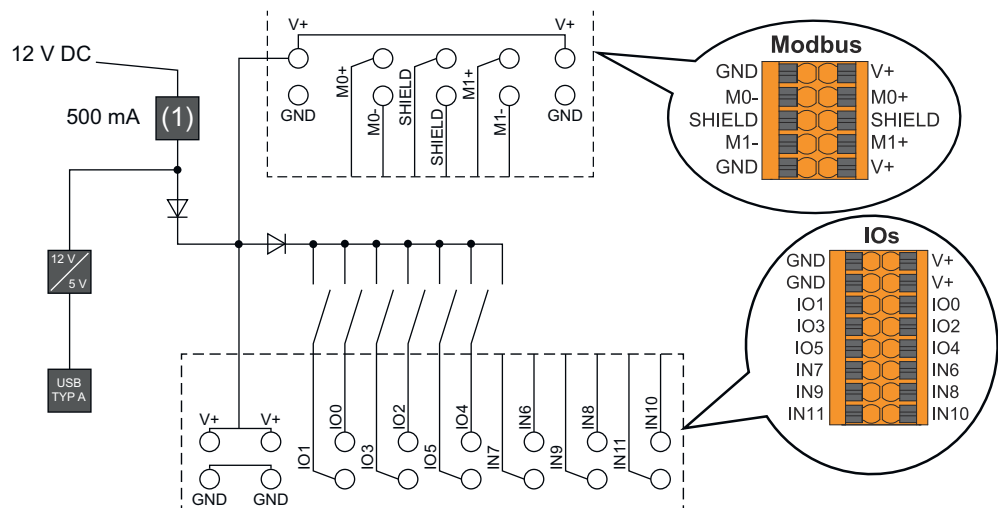


(1) Current limitation

# Installation



# General

## Tools required

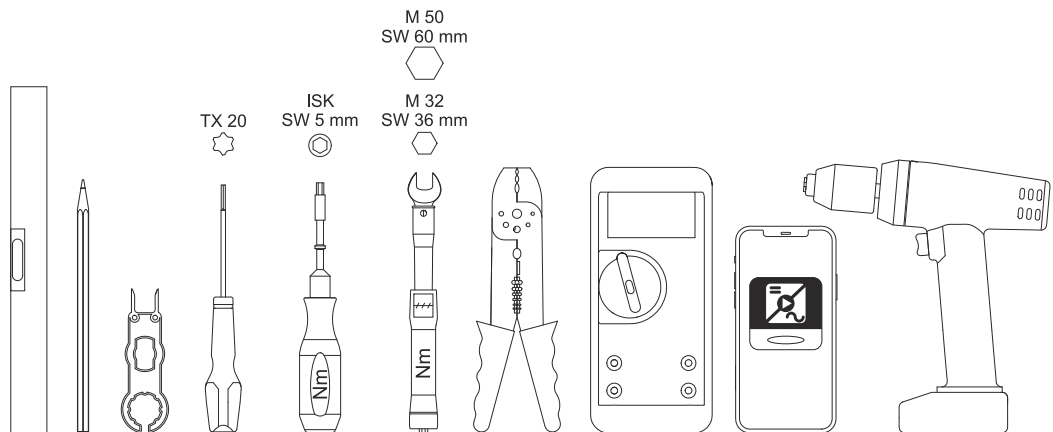

- Spirit level
- Pencil
- TX20 screwdriver
- Hex socket torque wrench 5 mm
- Torque wrench M32, M50
- Wire stripper for cables and wires
- Multimeter for measuring voltage
- Smartphone, tablet, or PC for setting up the inverter
- Drill driver


## Quick-fastener system

### NOTE

#### **Danger when using a drill driver.**

This may result in the destruction of the quick-fastener system due to over-torque.

- Use a screwdriver (TX20).
- Do not turn the screws more than 180°.

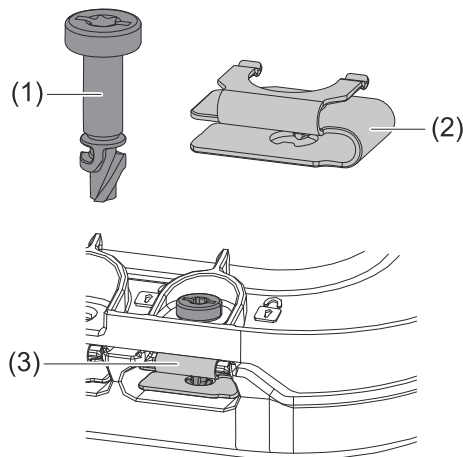

A quick-fastener system (3) is used to mount the connection area cover and front cover. The system is opened and closed with a half-rotation (180°) of the captive screw (1) into the quick-fastener spring (2).

The system is independent of torque.

---

**System component compatibility**

All installed components in the PV system must be compatible with each other and have the necessary configuration options. The installed components must not restrict or negatively affect the functioning of the PV system.

**NOTE****Risk due to components in the PV system that are not and/or only partially compatible.**


Incompatible components can restrict and/or negatively affect the operation and/or functioning of the PV system.

- ▶ Only install components recommended by the manufacturer in the PV system.
- ▶ Before installation, check the compatibility of components that have not been expressly recommended with the manufacturer.

# Installation location and position

## Choosing the location of the inverter

Please observe the following criteria when choosing a location for the inverter:

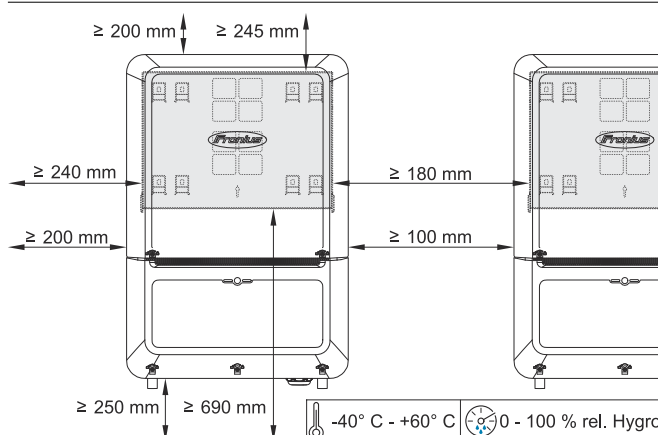

Only install on a solid, non-flammable surface.

When installing the inverter in a switch cabinet or similar closed environment, ensure adequate heat dissipation by forced-air ventilation.

When installing the inverter on the outer walls of cattle sheds, it is important to maintain a minimum clearance of 2 m between all sides of the inverter and the ventilation and building openings.

The following substrates are allowed:

- Wall installation: Corrugated sheet metal (mounting rails), brick, concrete, or other non-flammable surfaces sufficiently capable of bearing loads
- Mast or beam: Mounting rails, behind the PV modules directly on the PV mounting system
- Flat roof (if this is for a film roof, make sure that the films comply with the fire protection requirements and are not highly flammable. Ensure compliance with the national provisions.)
- Covered parking lot roof (no overhead installation)



The inverter is suitable for indoor installation.



The inverter is suitable for outdoor installation.


Due to its IP 66 protection class, the inverter is not susceptible to water spray from any direction.



Do not expose the inverter to direct sunlight in order to keep inverter heating as low as possible.



The inverter should be installed in a protected location, e.g., near the PV modules or under an overhanging roof.

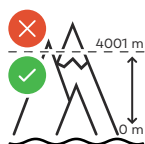

The inverter must not be installed or operated at more than 4 000 m above sea level.

The voltage  $U_{DCmax}$  must not exceed the following values:

- between 0 and 3000 m: 1000 V
- between 3001 and 3500 m: 959 V
- between 3501 and 4000 m: 909 V
- over 4001: not allowed



Do not install the inverter:

- Where it may be exposed to ammonia, corrosive gases, acids or salts (e.g., fertilizer storage areas, vent openings for livestock stables, chemical plants, tanneries, etc.)



During certain operating phases the inverter may produce a slight noise. For this reason it should not be installed in an occupied living area.



Do not install the inverter in:

- Areas where there is an increased risk of accidents from farm animals (horses, cattle, sheep, pigs, etc.)
- Stables or adjoining areas
- Storage areas for hay, straw, chaff, animal feed, fertilizers, etc.



The inverter is designed to be dust-proof (IP 66). In areas of high dust accumulation, dust deposits may collect on the cooling surfaces, and thus impair the thermal performance. In this case, cleaning is required regularly. We therefore recommend not installing the inverter in areas and environments with high dust accumulation.



Do not install the inverter in:

- Greenhouses
- Storage or processing areas for fruit, vegetables, or viticulture products
- Areas used in the preparation of grain, green fodder, or animal feeds


## Installation position of inverter



The inverter is suitable for vertical installation on a vertical wall or column.

Do not install the inverter:

- At an angle
- In the horizontal position
- With the connection sockets facing upwards
- On a base

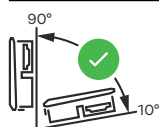

The inverter is suitable for a horizontal installation position or for installation on a sloping surface.

Do not install the inverter:


- On a sloping surface with the connection sockets facing upwards
- Overhanging with the connection sockets facing down
- On the ceiling

# Installing the mounting bracket and attaching the inverter

## Selecting the mounting material

Use the corresponding fixing materials depending on the subsurface and observe the screw dimension recommendations for the mounting bracket. The installer is responsible for selecting the right type of fixing.

## Properties of the mounting bracket

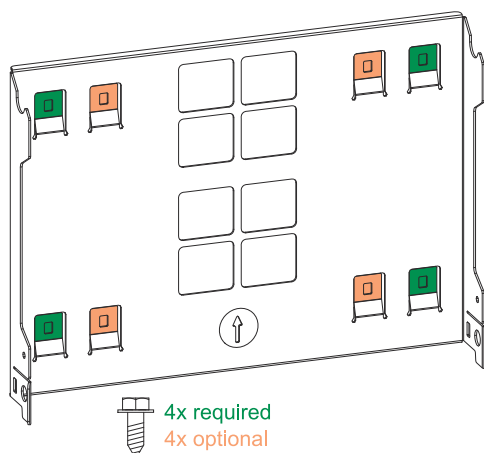

The mounting bracket (illustration) can also be used as a guide.

The pre-drilled holes on the mounting bracket are intended for screws with a thread diameter of 6-8 mm (0.24-0.32 inches).

Unevenness on the installation surface (for example, coarse-grained plaster) is largely counterbalanced by the mounting bracket.

The mounting bracket must be fixed to the four outer tabs (marked in green). The four inner tabs (marked in orange) can be used in addition if required.

## Do not deform the mounting bracket

### NOTE


**When attaching the mounting bracket to the wall or to a column, make sure that the mounting bracket is not deformed.**

A deformed mounting bracket may make it difficult to clip/swivel the inverter into position.


## Fitting the mounting bracket to a wall

### IMPORTANT!


When installing the mounting bracket, make sure that it is installed with the arrow pointing upwards.

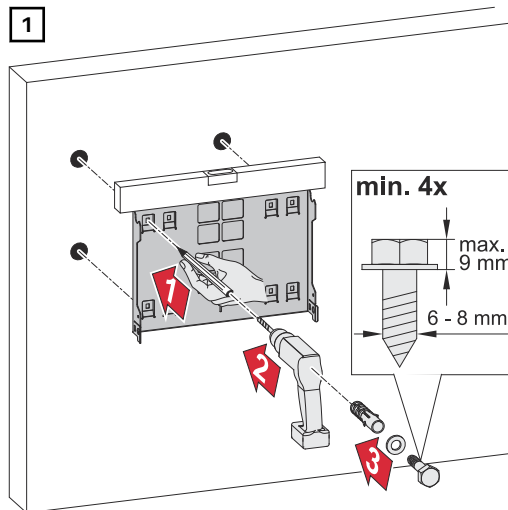

### Attaching the inverter to the mounting bracket

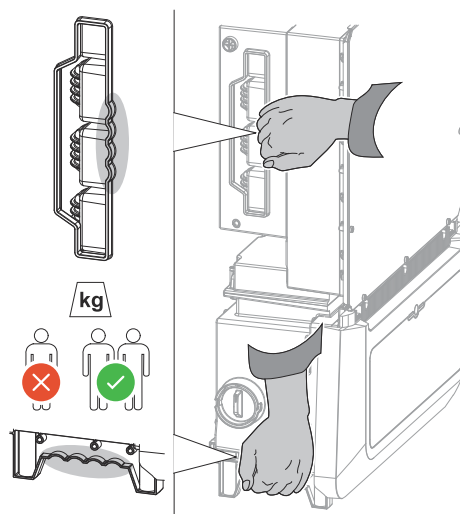

There are integrated grips on the side of the inverter which facilitate lifting/ attaching.

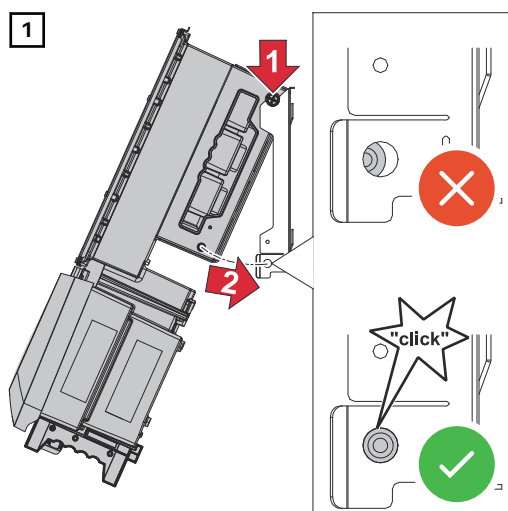

Clip the inverter into the mounting bracket from above. The connections must point downwards.

Push the lower part of the inverter into the snap-in tabs of the mounting bracket until the inverter audibly clicks into place on both sides.

Check that the inverter is correctly positioned on both sides.

# Requirements for connecting the inverter

## Connecting aluminum cables






Aluminum cables can also be connected to the AC connections.

### NOTE

#### When using aluminum cables:

- ▶ Follow all national and international guidelines regarding the connection of aluminum cables.
- ▶ Grease aluminum wires with appropriate grease to protect them from oxidation.
- ▶ Follow the instructions of the cable manufacturer.






## Different cable types

| Solid                                                                             | Fine-stranded                                                                     | Fine-stranded with ferrule and collar                                             | Fine-stranded with ferrule without collar                                           | Sectoral                                                                            |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |  |  |

## Permitted cables for the electrical grid connection

Round copper or aluminum conductors with a cross-section of 4 to 35 mm<sup>2</sup> can be connected to the terminals of the inverter as described below.

The torques according to the following table must be observed:

| Cross-section      | Copper                                                                                                                                                                     |                                                                                                                                                                              | Aluminum                                                                                                                                                                       |                                                                                       |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|                    | <br> | <br> | <br> |  |
| 35 mm <sup>2</sup> | 10 Nm                                                                                                                                                                      | 10 Nm                                                                                                                                                                        | 14 Nm                                                                                                                                                                          | 14 Nm                                                                                 |
| 25 mm <sup>2</sup> | 8 Nm                                                                                                                                                                       | 8 Nm                                                                                                                                                                         | 12 Nm                                                                                                                                                                          | 10 Nm                                                                                 |
| 16 mm <sup>2</sup> |                                                                                                                                                                            |                                                                                                                                                                              | 10 Nm                                                                                                                                                                          |                                                                                       |
| 10 mm <sup>2</sup> | 6 Nm                                                                                                                                                                       | 6 Nm                                                                                                                                                                         |                                                                                           |  |
| 6 mm <sup>2</sup>  |                                                                                                                                                                            |                                                                                                                                                                              |                                                                                                                                                                                |                                                                                       |
| 4 mm <sup>2</sup>  |                                                                                         |                                                                                                                                                                              |                                                                                                                                                                                |                                                                                       |

SPD type 2: The grounding must be established with a 6 mm<sup>2</sup> copper or 16 mm<sup>2</sup> aluminum cable as a minimum requirement.

SPD type 1+2: The grounding must be established with a 16 mm<sup>2</sup> copper or aluminum cable as a minimum requirement.

**Permitted cables for the electrical DC connection**

Round copper conductors with a cross section of **4-10 mm<sup>2</sup>** can be connected to the MC4 plugs of the inverter.




Select a sufficiently large cable cross-section based on the actual device output and the installation situation! Observe the data sheet for the plug!




**Permitted cables for the data communication connection**


Connect round copper conductors to the terminals of the inverter as described below.

**IMPORTANT!**

If several single conductors are connected to an input of the terminal, connect the single conductors with a corresponding ferrule.

| WSD connections |                      |                                                                                   |                                                                                   |                                                                                   |                                                                                     |                                          |
|-----------------|----------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------|
| Distance        | Stripping length     |  |  |  |  | Cable recommendation                     |
| 100 m<br>109 yd | 10 mm<br>0.39 inches | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                         | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                         | 0.14 - 1 mm <sup>2</sup><br>AWG 26 - 18                                           | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                           | Min. CAT 5 UTP (unshielded twisted pair) |

| Modbus connections |                      |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                        |
|--------------------|----------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|----------------------------------------|
| Distance           | Stripping length     |  |  |  |  | Cable recommendation                   |
| 300 m<br>328 yd    | 10 mm<br>0.39 inches | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                           | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                           | 0.14 - 1 mm <sup>2</sup><br>AWG 26 - 18                                             | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                             | Min. CAT 5 STP (shielded twisted pair) |

| IO connections |                      |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                            |
|----------------|----------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|----------------------------|
| Distance       | Stripping length     |  |  |  |  | Cable recommendation       |
| 30 m<br>32 yd  | 10 mm<br>0.39 inches | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                           | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                           | 0.14 - 1 mm <sup>2</sup><br>AWG 26 - 18                                             | 0.14 - 1.5 mm <sup>2</sup><br>AWG 26 - 16                                             | Single conductors possible |

| LAN connections                                                                                                      |  |  |  |  |  |  |
|----------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|--|
| Fronius recommends using at least CAT 5 STP (shielded twisted pair) cables and a maximum distance of 100 m (109 yd). |  |  |  |  |  |  |

**Cable diameter of the AC cable**


For a standard M32 cable gland **with a large reducer (green)**:  
Cable diameter from **12-14 mm**

For a standard M32 cable gland **with a small reducer (red)**:  
Cable diameter from **17-19 mm**

For a standard M32 cable gland **without a reducer**:  
Cable diameter from **20.5-24.5 mm**

For an M50 cable gland:  
Cable diameter from **≤35 mm**

**Maximum alternating current fuse protection**

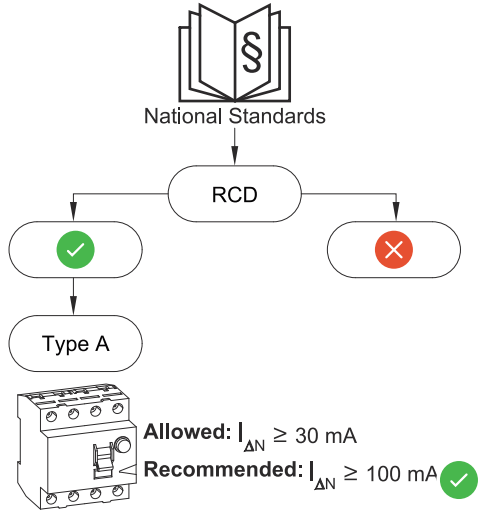

**NOTE**

**A residual current circuit breaker for the AC connecting cable may be required depending on national regulations, the grid operator, and other conditions.**

A type A residual current breaker is generally sufficient in this case. Nevertheless, false alarms can be triggered for the type A residual current circuit breaker in individual cases and depending on local conditions. For this reason, Fronius recommends using a residual current circuit breaker suitable for frequency inverters with a release current of at least 100 mA, taking into account national provisions.

| Verto        | AC power | Recommended fuse protection | Max. fuse protection |
|--------------|----------|-----------------------------|----------------------|
| 15.0 208-240 | 15 kW    | 63 A                        | 63 A                 |
| 18.0 208-240 | 18 kW    | 63 A                        | 63 A                 |
| 25.0         | 25 kW    | 63 A                        | 63 A                 |
| 27.0         | 27 kW    | 63 A                        | 63 A                 |
| 30.0         | 29.9 kW  | 63 A                        | 63 A                 |
| 33.3         | 33.3 kW  | 63 A                        | 63 A                 |
| 36.0 480     | 36 kW    | 63 A                        | 63 A                 |

# Connecting the inverter to the public grid (AC side)

---

## Safety



### WARNING

**Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- ▶ Read the Installation Instructions and Operating Instructions before installing and commissioning the equipment.
- ▶ Only qualified personnel are authorized to commission the inverter and only within the scope of the respective technical regulations.



### WARNING

**Danger from grid voltage and DC voltage from PV modules that are exposed to light.**

An electric shock can be fatal.

- ▶ Prior to any connection work, ensure that the inverter is de-energized on the AC side and the DC side.
- ▶ Only an authorized electrical engineer is permitted to connect this equipment to the public grid.



### WARNING

**Danger from damaged and/or contaminated terminals.**

This can result in severe personal injury and damage to property.

- ▶ Prior to connection work, check the terminals for damage and contamination.
- ▶ Remove any contamination while the equipment is de-energized.
- ▶ Have defective terminals replaced by an authorized specialist.


---

## Connecting the inverter to the public grid (AC side)

It is not possible to operate the inverter in ungrounded networks, e.g., IT networks (isolated networks without ground conductor).


In certain system configurations, it is not necessary to connect the neutral conductor. In this system configuration, the **neutral conductor status** parameter must be set to **Not connected** on the web interface of the inverter in the **Device configuration > Inverter > AC grid** menu.

1

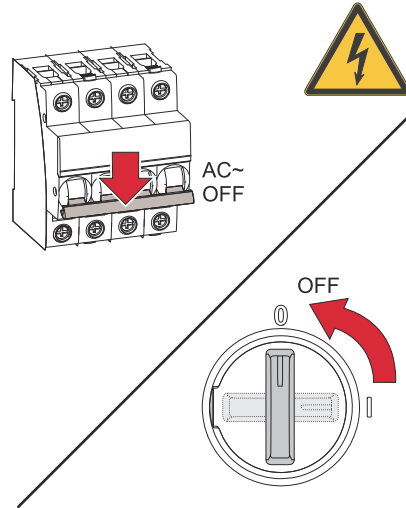


Switch off the external automatic circuit breakers (AC and battery). Make sure that the DC disconnect (see [DC disconnect](#)) is set to the "Off" switch position.

2

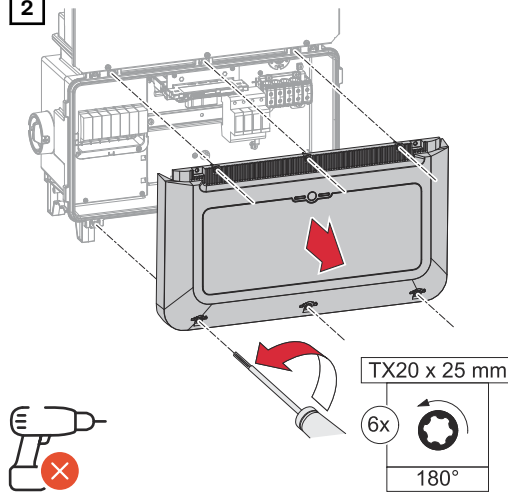

Loosen the 6 screws on the connection area cover by rotating them 180° to the left using a screwdriver (TX20). Remove the connection area cover from the device.


3

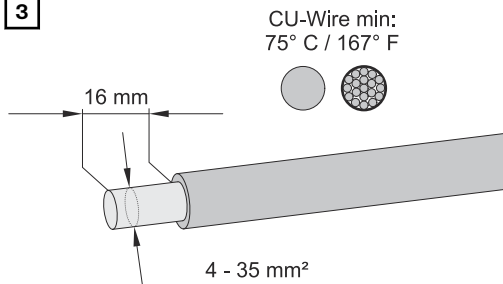


Strip the insulation of the single conductors by 16 mm. Select the cable cross-section in accordance with the instructions in [Permitted cables for the electrical grid connection](#) from page 37.

### IMPORTANT!

Only one conductor may be connected to each pin. With a twin ferrule, two conductors can be connected to one pin.

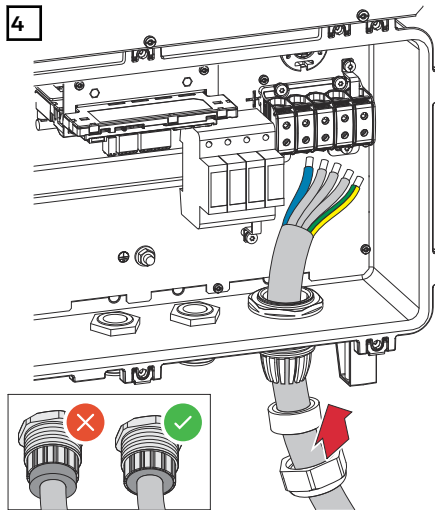


Connection with neutral conductor

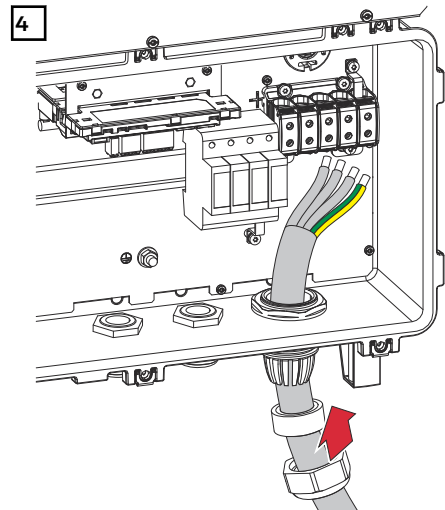


Connection without neutral conductor

For more information about the cable gland, see chapter [Cable diameter of the AC cable](#) on page 38.

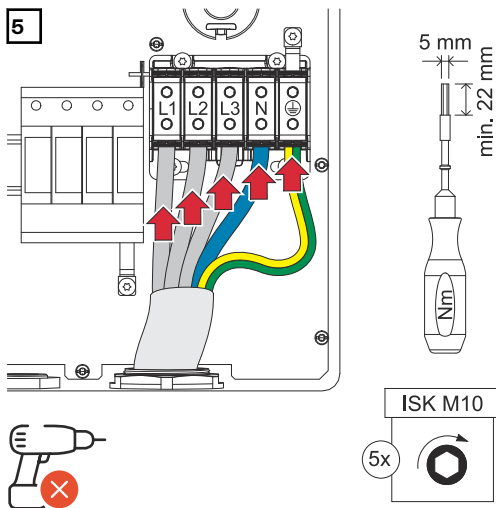

Connection with neutral conductor

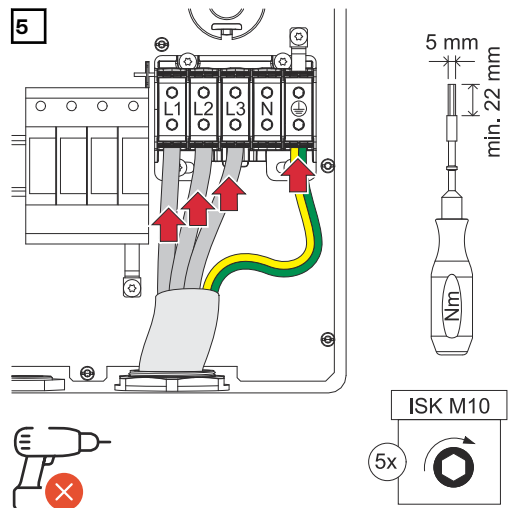

Connection without neutral conductor


**IMPORTANT!** Observe torques – see [Permitted cables for the electrical grid connection](#) on page 37.

### IMPORTANT!

The ground conductor must be dimensioned longer and laid with a movement loop so that it is last loaded in the event of a failure of the cable gland.

- L1 Phase conductor
- L2 Phase conductor
- L3 Phase conductor
- N Neutral conductor (optional)
- PE Ground conductor

6

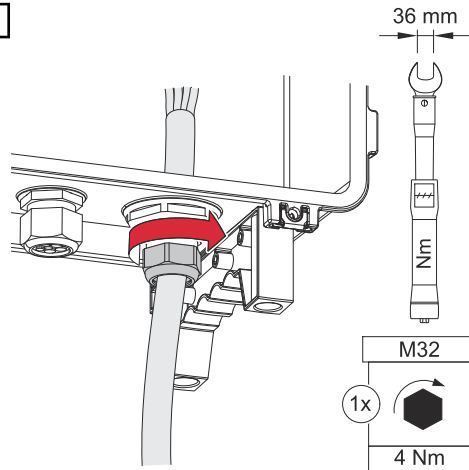


Fasten the union nut of the cable gland with a torque of 4 Nm.

### Connecting the inverter to the public grid with the PEN conductor (AC side)


It is not possible to operate the inverter in ungrounded networks, e.g., IT networks (isolated networks without ground conductor).

1

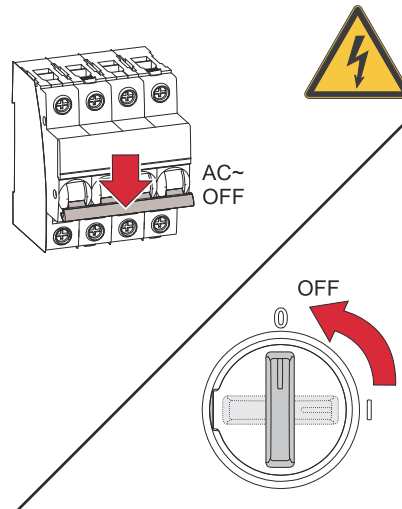


Switch off the external automatic circuit breakers (AC and battery). Make sure that the DC disconnect (see [DC disconnect](#)) is set to the "Off" switch position.

2

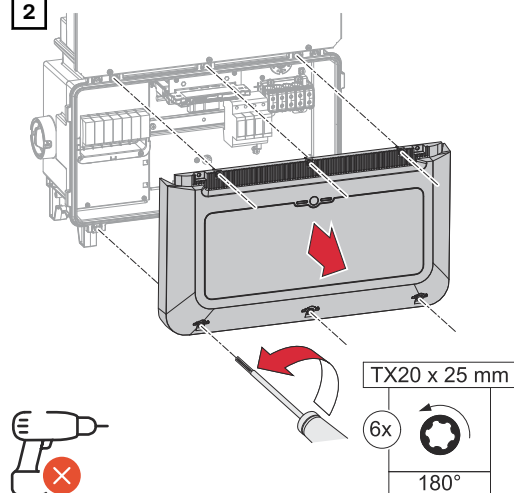

Loosen the 6 screws on the connection area cover by rotating them 180° to the left using a screwdriver (TX20). Remove the connection area cover from the device.

3

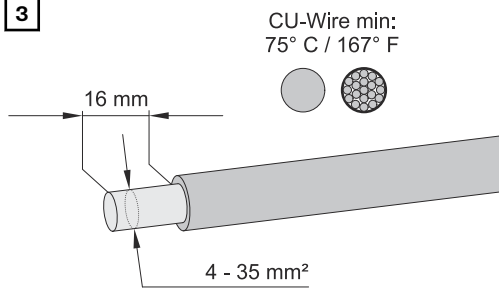


Strip the insulation of the single conductors by 16 mm.  
Select the cable cross-section in accordance with the instructions in [Permitted cables for the electrical grid connection](#) from page 37.

**IMPORTANT!**

Only one conductor may be connected to each pin. With a twin ferrule, two conductors can be connected to one pin.

4

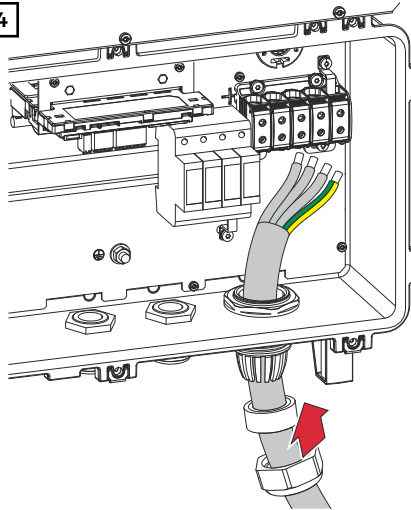


For more information about the cable gland, see chapter [Cable diameter of the AC cable](#) on page 38.

The PEN conductor must have ends that are permanently marked blue, according to the national regulations.


Dimension the ground conductor longer and lay it with a movement loop so that it is last loaded in the event of a failure of the cable gland.

5

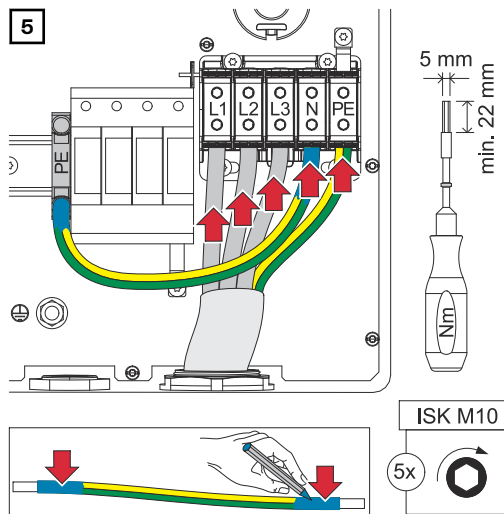


Observe torques – see [Permitted cables for the electrical grid connection](#) on page 37.

*PEN conductor version: Terminal on DIN rail*

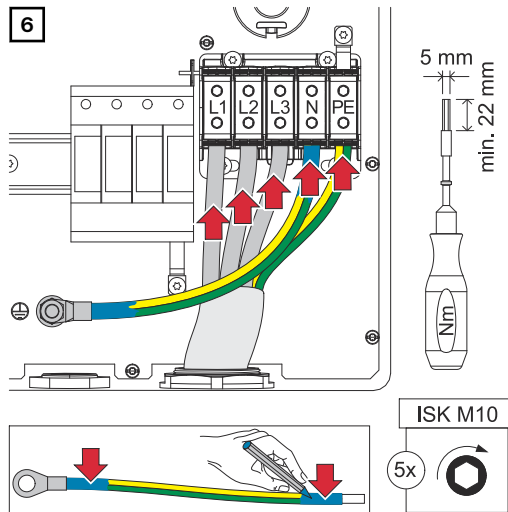


PEN conductor version: Grounding bolt

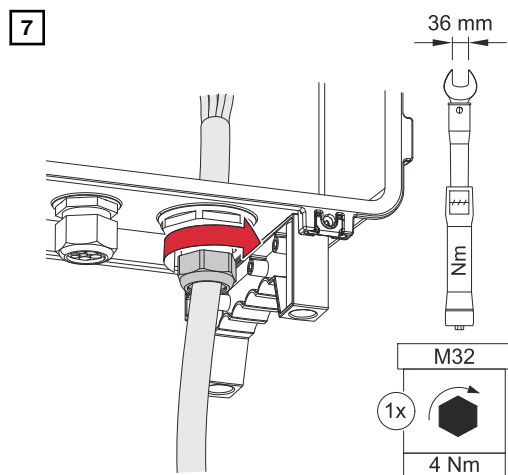

Fasten the union nut of the cable gland with a torque of 4 Nm.

### Replacing the PG screw joint

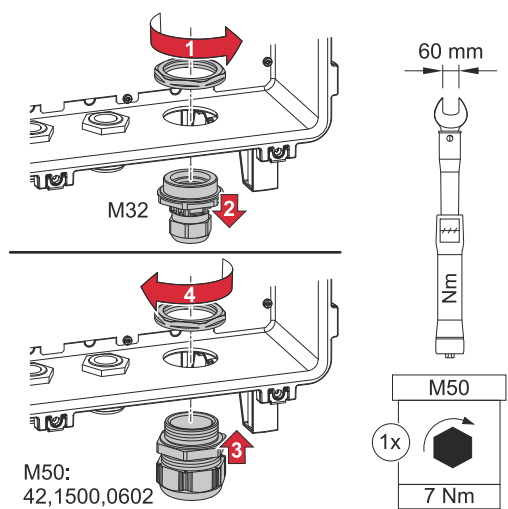

# Connecting solar module strings to the inverter


## General information about PV modules

To enable suitable PV modules to be chosen and to use the inverter as efficiently as possible, it is important to bear the following points in mind:

- If insolation is constant and the temperature is falling, the open circuit voltage of the PV modules will increase. The open circuit voltage must not exceed the max. permissible system voltage. An open circuit voltage above the indicated values will damage the inverter, and all warranty rights will become null and void.
- The temperature coefficients on the data sheet of the PV modules must be observed.
- Exact values for sizing the PV modules can be obtained using suitable calculation tools, such as the [Fronius Solar.creator](#).

### IMPORTANT!

Before connecting up the PV modules, check that the voltage for the PV modules specified by the manufacturer corresponds to the actual measured voltage.

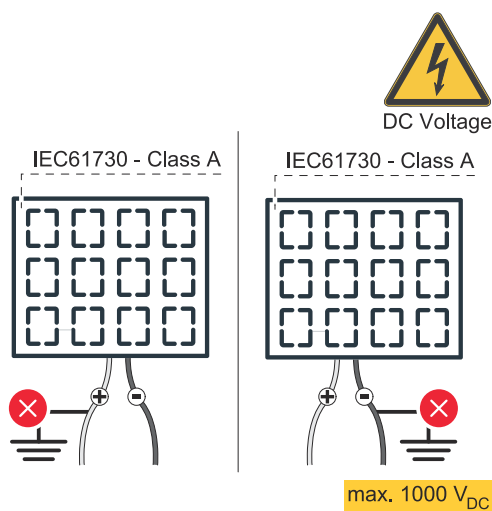

### IMPORTANT!

The PV modules connected to the inverter must comply with the IEC 61730 Class A standard.

### IMPORTANT!

Solar module strings must not be grounded.

## Safety



### WARNING

#### **Danger from incorrect operation and work that is not carried out properly.**

This can result in severe personal injury and damage to property.

- The commissioning, maintenance, and service work in the inverter's power stage set may only be carried out by Fronius-trained service personnel in accordance with the technical specifications.
- Read the installation instructions and operating instructions before installing and commissioning the equipment.



### WARNING

#### **Danger from mains voltage and DC voltage from PV modules that are exposed to light.**

This can result in severe personal injury and damage to property.

- ▶ All connection, maintenance, and service work should only be carried out when the AC and DC sides have been disconnected from the inverter and are de-energized.
- ▶ Only an authorized electrical engineer is permitted to connect this equipment to the public grid.



### WARNING

#### **Danger of an electric shock due to improperly connected terminals/PV plug connectors.**

An electric shock can be fatal.

- ▶ When connecting, ensure that each pole of a string is routed via the same PV input, e.g.:  
**+ pole string 1** to the input **PV 1.1+** and **- pole string 1** to the input **PV 1.1-**



### WARNING

#### **Danger from damaged and/or contaminated terminals.**

This can result in severe personal injury and damage to property.

- ▶ Prior to connection work, check the terminals for damage and contamination.
- ▶ Remove any contamination while the equipment is de-energized.
- ▶ Have defective terminals replaced by an authorized specialist company.


## **PV Generator, general**

Several independent PV inputs are available. These inputs can be connected to a number of different modules.


When starting for the first time, set up the PV Generator in accordance with the respective configuration (can also be carried out at a later date in the **System configuration** menu field under menu item **Components**).

## **Connecting solar module strings to the inverter**

1

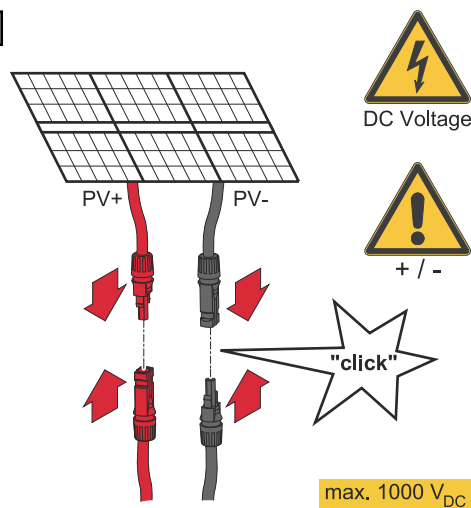

2

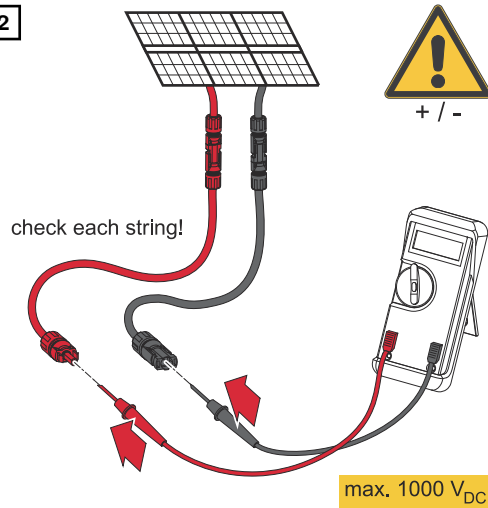

Use a suitable measuring instrument to check the voltage and polarity of the DC cabling.

### ⚠ CAUTION

#### **Danger due to polarity reversal at the terminals.**

This may result in severe damage to the inverter.

- ▶ Use a suitable measuring instrument to check the polarity of the DC cabling.
- ▶ Use a suitable measuring instrument to check the voltage (**max. 1000 V<sub>DC</sub>**)


### ⚠ CAUTION

#### **Risk of damage due to incompatible plug connectors.**

Incompatible plug connectors can cause thermal damage and may cause a fire.

- ▶ Only use the original plug connectors (MC4) from Stäubli (formerly Multi-Contact).

3

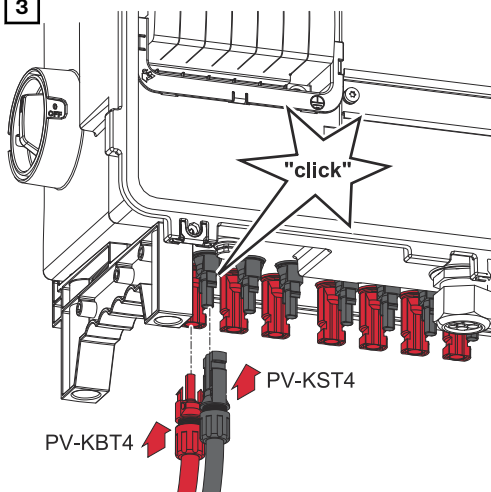

Connect PV cables from the solar modules to the MC4 plugs according to the label

Unused MC4 plugs on the inverter must be closed by the cover caps supplied with the inverter.

# Connecting the data communication cables

## Modbus participants

The inputs M0 and M1 can be freely selected. A maximum of four Modbus participants can be connected to the Modbus terminal at inputs M0 and M1.

### IMPORTANT!

Only one primary meter, one battery, and one Ohmpilot can be connected per inverter. Due to the high data transfer of the battery, the battery occupies two subscribers. If the **Inverter Control via Modbus** function is activated in the **Communication > Modbus** menu area, no Modbus participants are possible. It is not possible to send and receive data at the same time.

### Example 1:

| Input         | Battery | Fronius Ohmpilot | Number of primary meters | Number of secondary meters |
|---------------|---------|------------------|--------------------------|----------------------------|
| Modbus 0 (M0) | ✗       | ✗                | 0                        | 4                          |
|               | ✓       | ✗                | 0                        | 2                          |
|               | ✓       | ✓                | 0                        | 1                          |
| Modbus 1 (M1) | ✗       | ✗                | 1                        | 3                          |

### Example 2:

| Input         | Battery | Fronius Ohmpilot | Number of primary meters | Number of secondary meters |
|---------------|---------|------------------|--------------------------|----------------------------|
| Modbus 0 (M0) | ✗       | ✗                | 1                        | 3                          |
| Modbus 1 (M1) | ✗       | ✗                | 0                        | 4                          |
|               | ✓       | ✗                | 0                        | 2                          |
|               | ✓       | ✓                | 0                        | 1                          |

## Routing data communication cables


### IMPORTANT!

If data communication cables are wired into the inverter, observe the following points:

- Depending on the number and cross-section of the wired data communication cables, remove the corresponding blanking plugs from the sealing insert and insert the data communication cables.
- Make sure that you insert the corresponding blanking plugs into any free openings on the sealing insert.

### IMPORTANT!


Ingress protection rating IP 66 cannot be ensured if blanking plugs are missing or incorrectly inserted.

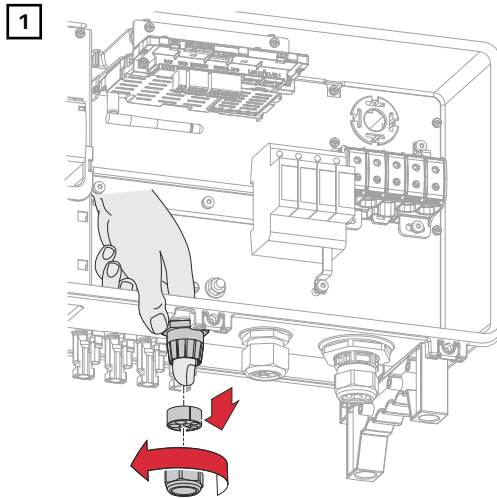


Remove the union nut on the cable gland and press the sealing ring with the blanking plugs out from the inside of the device.

- 2
- 3x Ø 4,9 - 5,5 mm (.193 - .217 inch)  
3x Ø 6,7 - 8,5 mm (.264 - .335 inch)


Open up the sealing ring at the location where the blanking plugs are to be removed.

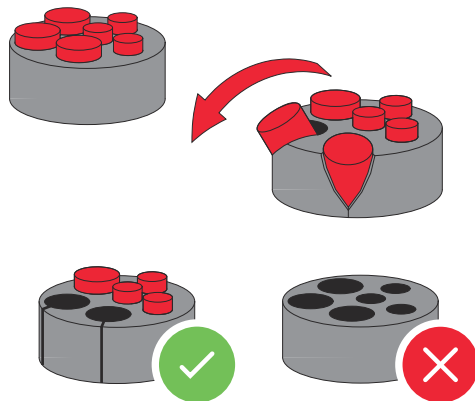


\* Remove the blanking plugs with a sideways motion.

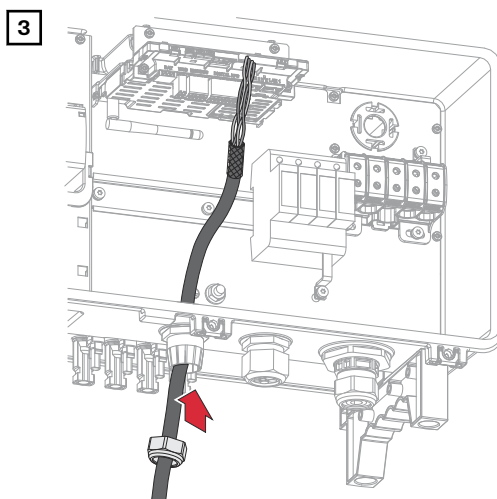

First, guide the data cables through the union nut of the cable gland and then through the housing opening.

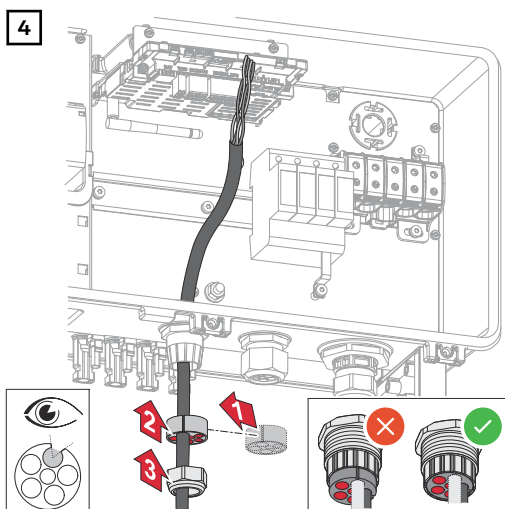


Insert the sealing ring between the union nut and the housing opening. Press the data cables into the seal's cable guide. Then press in the seal until it reaches the underside of the cable gland.

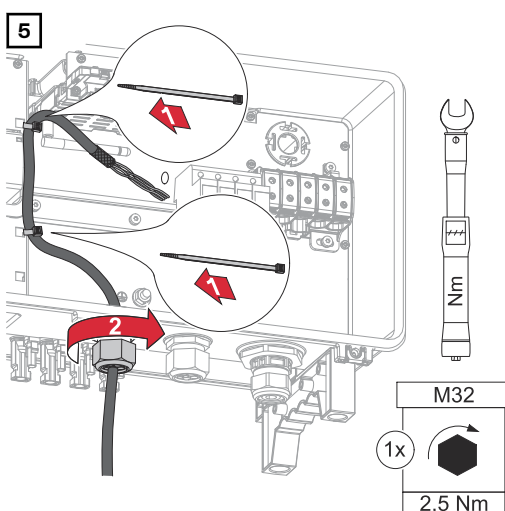

Using a cable tie, attach the data cables to the protective cover of the DC surge protection device (SPD). Fasten the union nut of the cable gland with a torque of min. 2.5 - max. 4 Nm.

### Installing the WSD (wired shutdown)

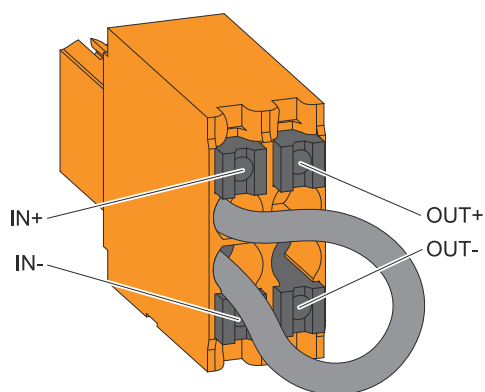


### IMPORTANT!

The push-in WSD terminal in the inverter's connection area is delivered with a bypass ex works as standard. The bypass must be removed when installing a trigger device or a WSD chain.

The WSD switch of the first inverter with connected trigger device in the WSD chain must be in position 1 (master). The WSD switch of all other inverters should be in position 0 (secondary device).


Max. distance between 2 devices: 100 m  
Max. Number of devices: 28

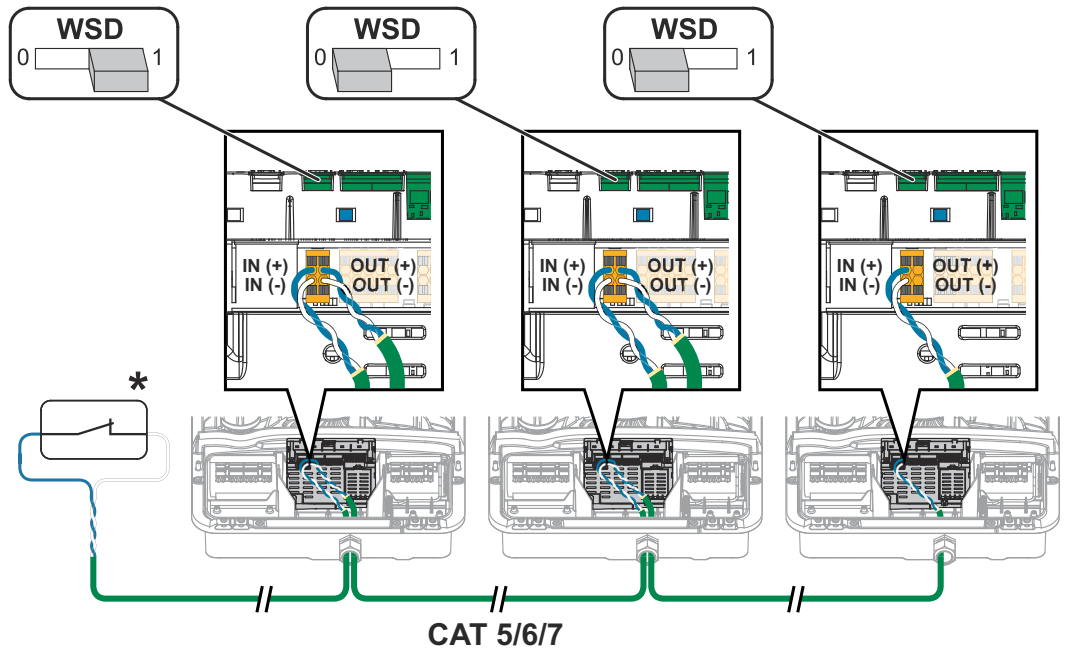


\* Floating contact of the trigger device (e.g., central grid and system protection). If several floating contacts are used in a WSD chain, these must be connected in series.

# Closing and commissioning the inverter


## Closing the inverter's connection area/housing cover, and commissioning

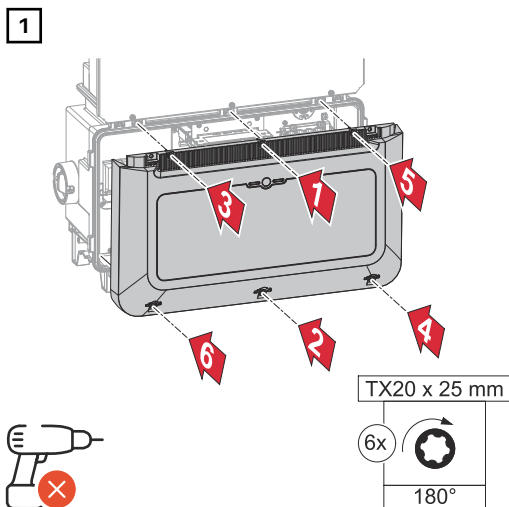

Place the cover on the connection area. Tighten six screws by rotating them 180° to the right using a screwdriver (TX20).

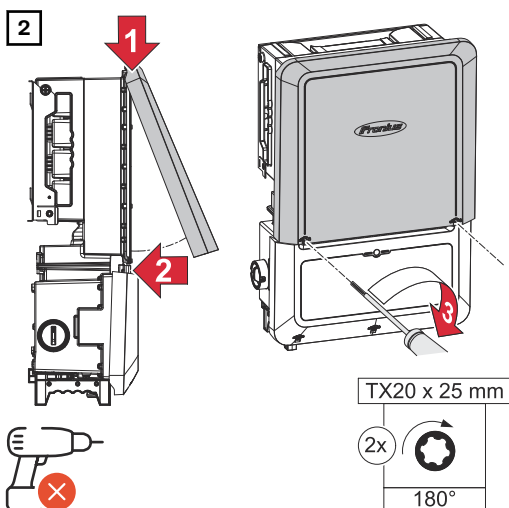

Clip the housing cover into the inverter from above. Press on the lower part of the housing cover and tighten the two screws by rotating them 180° to the right using a screwdriver (TX20).

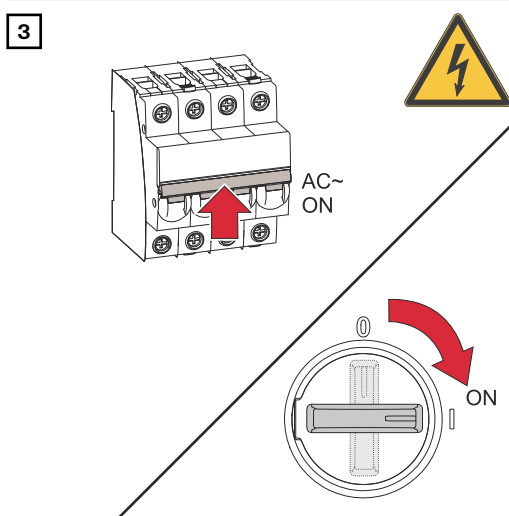

Turn the DC disconnecter to the "on" switch setting. Turn on the automatic circuit breaker.

**IMPORTANT!** Open the WLAN access point with the optical sensor; refer to the chapter headed [Button functions and LED status indicator](#) on page 26

## Starting the inverter for the first time


When starting the inverter for the first time, various setup settings must be configured.

If the setup is canceled before completion, the input data is not saved and the start screen with the installation wizard is shown once again. The data is saved in the event of an interruption, e.g., a power failure. Commissioning is continued at the point at which the interruption occurred after the power supply is restored. If the setup was interrupted, the inverter feeds energy into the grid at maximum 500 W and the operating status LED flashes yellow.

The country setup can only be set when starting the inverter for the first time. If the country setup needs to be changed at a later date, contact your installer/technical support.

## Installation with the app

The Fronius Solar.start app is required for installation. Depending on the mobile device used to perform the installation, the app is available on the relevant platform.

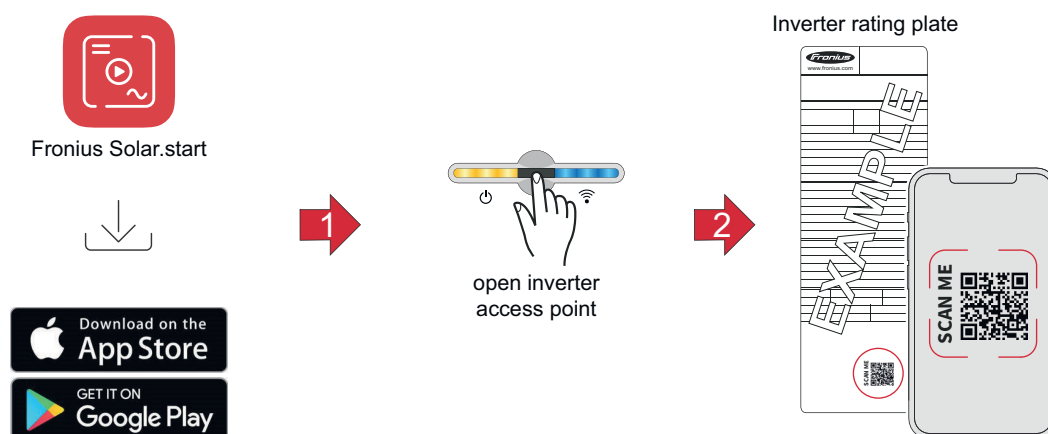


- 1 Download and install the Fronius Solar.start app.
- 2 Open the access point by touching the sensor .  
✓ *Communication LED flashes blue.*
- 3 Open the Fronius Solar.start app and follow the installation wizard. Scan the QR code on the rating plate with a smartphone or tablet to connect to the inverter.
- 4 Add system components in Fronius Solar.web and commission the PV system.

The network wizard and product setup can be performed independently. A network connection is required for the Fronius Solar.web installation wizard.

## Installation with the browser


The network wizard and product setup can be performed independently. A network connection is required for the Fronius Solar.web installation wizard.

### WiFi:

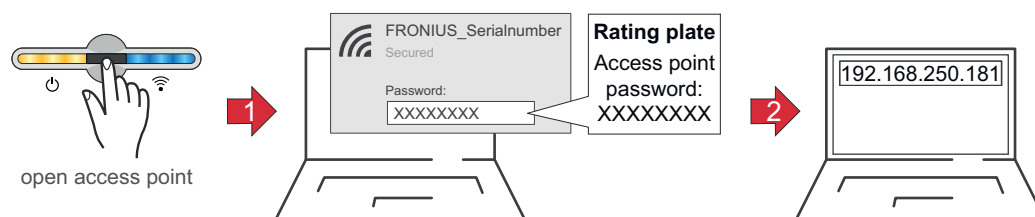

- 1 Open the access point by touching the sensor .  
✓ *Communication LED flashes blue.*
- 2 Establish the connection to the inverter in the network settings (the inverter is displayed with the name "FRONIUS\_" and the serial number of the device).
- 3 Enter the password from the rating plate and confirm.  
**IMPORTANT!**  
To enter the password, first select the **Connect using a security key instead** link in order to establish the connection with the password.
- 4 Enter the IP address 192.168.250.181 in the address bar of the browser and confirm. The installation wizard opens.
- 5 Follow the installation wizard and complete the installation in the individual areas.
- 6 Add the system components in Fronius Solar.web and commission the PV system.

#### Ethernet:

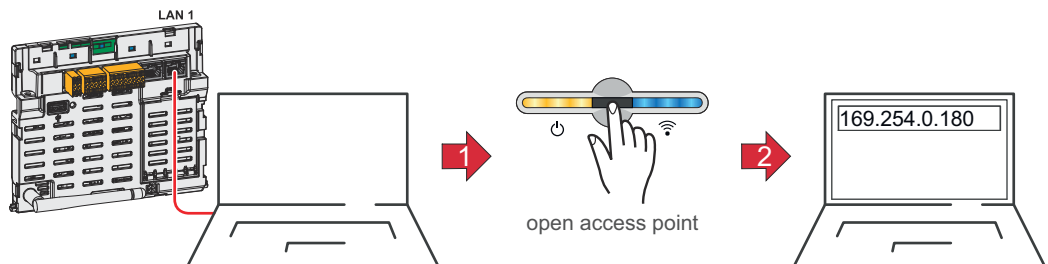

- 1 Establish a connection to the inverter (LAN1) using a network cable (min. CAT5 STP).
- 2 Open the access point by touching the sensor once .  
✓ *Communication LED flashes blue.*
- 3 Enter the IP address 169.254.0.180 in the address bar of the browser and confirm. The installation wizard opens.
- 4 Follow the installation wizard and complete the installation in the individual areas.
- 5 Add the system components in Fronius Solar.web and commission the PV system.

# De-energizing the inverter and switching it back on

## Risk of rupture




### WARNING

**In the case of electrical devices with a high housing protection class, there is a risk of explosion in the event of a fault. Possible causes are defective components that release gases, improperly installed or commissioned devices, or the penetration of gas via lines (conduits).**

This may result in serious personal injury and damage to property.

- ▶ Turn off the automatic circuit breaker
- ▶ If possible, switch off the DC line in front of the inverter (additional external DC disconnect)
- ▶ Turn the DC disconnect to the "OFF" switch setting
- ▶ Remove the connection area cover
- ▶ Allow the capacitors of the inverter to discharge (2 minutes)

## De-energizing the inverter and switching it back on

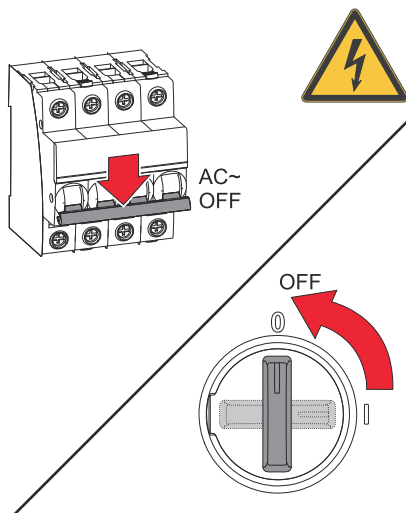

### Disconnecting the inverter from the power supply:

- 1 Switch off the automatic circuit breaker (AC and, if present, battery).
- 2 Turn the DC disconnect to the "Off" switch setting.

### IMPORTANT!

Wait for the capacitors of the inverter to discharge!

### Switching on the inverter:

If the inverter has not been in operation for six months or more after installation, it must be tested before commissioning.

- 1 Turn the DC disconnect to the "On" switch setting.
- 2 Switch on the automatic circuit breaker (AC and, if present, battery).

# **Settings – User interface of the in- verter**



# User settings

---

## User login

- 1 Open the user interface of the inverter in the browser.
- 2 In the **Login** menu area, log in with username and password, or, in the **User > User Login** menu area, log in with username and password.

### IMPORTANT!

Depending on the authorization of the user, settings can be made in the individual menu areas.

---

## Selecting languages

- 1 In the **User > Language** menu area, select the desired language.

# Device configuration

## Components

All available components of the system can be added via **Add component+**.

### PV Generator

Activate the MPP tracker and enter the connected PV output in the relevant field.

### Primary meter

For problem-free operation with further energy producers, it is important to install the Fronius Smart Meter at the feed-in point. The inverter and further producers must be connected to the public grid via the Fronius Smart Meter.

This setting also has an effect on the behavior of the inverter during the night. If the function is deactivated, the inverter switches to standby mode as soon as there is no more PV power available. The inverter starts again as soon as sufficient PV power is available.

If the function is activated, the inverter remains permanently connected to the grid in order to draw energy from other producers at any time.

After connecting the meter, the position must be configured.

- **Modbus RTU**
- **Modbus TCP**
- **MQTT** (available **MQTT device** is displayed automatically)

#### NOTE

For communication via MQTT, the inverter and Smart Meter must be in the same sub-network.

The following parameters must also be defined for the Smart Meter:

- **Application** (**Production meter** or **Secondary meter**)
- **Name**
- **Category** (e.g., **inverter**)
- **IP Address** (for Modbus TCP)
- **Port** (for Modbus TCP)
- **Modbus Address** (for Modbus RTU and TCP)

The Watt value for the production meter is the sum of all production meters. The Watt value for the secondary meter is the sum of all secondary meters.

### Ohmpilot

All the Ohmpilots available in the system are displayed. Select the desired Ohmpilot and add to the system via "Add."

## Functions and I/Os

### Load Management

Select up to four pins for the load management. Further settings for the load management are available in the **Load Management** menu item.  
Default: Pin 1

### Australia - Demand Response Modes (DRM)

Activate the slider if DRM is required. Configure the pins for control via DRM as follows:

| Mode | Description                                               | Information                                                                                                                                                                  | DRM Pin                | I/O pin    |
|------|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|------------|
| DRM0 | Inverter disconnects from the grid                        | DRM0 occurs in the event of an interruption or short circuit on the REF GEN or COM LOAD lines, or in the event of invalid combinations of DRM1 - DRM8. The grid relays open. | REF GEN<br>COM<br>LOAD | IO4<br>IO5 |
| DRM1 | Import $P_{nom} \leq 0\%$ without disconnection from grid | currently not supported                                                                                                                                                      | DRM 1/5                | IN6        |
| DRM2 | Import $P_{nom} \leq 50\%$                                | currently not supported                                                                                                                                                      | DRM 2/6                | IN7        |
| DRM3 | Import $P_{nom} \leq 75\%$ & $+Q_{rel}^* \geq 0\%$        | currently not supported                                                                                                                                                      | DRM 3/7                | IN8        |
| DRM4 | Import $P_{nom} \leq 100\%$                               | currently not supported                                                                                                                                                      | DRM 4/8                | IN9        |
| DRM5 | Export $P_{nom} \leq 0\%$ without disconnection from grid | currently not supported                                                                                                                                                      | DRM 1/5                | IN6        |
| DRM6 | Export $P_{nom} \leq 50\%$                                | currently not supported                                                                                                                                                      | DRM 2/6                | IN7        |
| DRM7 | Export $P_{nom} \leq 75\%$ & $-Q_{rel}^* \geq 0\%$        | currently not supported                                                                                                                                                      | DRM 3/7                | IN8        |
| DRM8 | Export $P_{nom} \leq 100\%$                               | currently not supported                                                                                                                                                      | DRM 4/8                | IN9        |

The percentage specifications always relate to the rated device power.

**IMPORTANT!** If the **Australia - Demand Response Modes (DRM)** function is activated and no DRM control is connected, the inverter switches to standby mode.

## Inverter

### Force standby

When this function is activated, the supply of energy from the inverter into the grid is interrupted. This makes it possible to shut down the inverter without power and protect its components. The standby function is automatically deactivated when the inverter is restarted.

### Fan test

#### IMPORTANT!

For settings in this menu item, select the **Technician** user, enter the password for the **Technician** user, and confirm. Settings may only be made by trained and qualified personnel!

This function can be used to check whether the fans of the inverter are working correctly based on acoustics, for example after replacing a fan.

#### 1 Click **Start fan test**

- ✓ *The inverter successively activates all fans that are running at partial load during the test phase to avoid unnecessary noise. The inverter is in standby during this time.*

- ✓ The test takes around 30 seconds per fan. The inverter then switches back to normal operation. The test can be stopped manually using the **Stop fan test** function.

#### AC network

| Parameter                       | Value range   | Description                                                                                       |
|---------------------------------|---------------|---------------------------------------------------------------------------------------------------|
| <b>Neutral conductor status</b> | Not connected | The neutral conductor is not required in the system configuration and is therefore not connected. |
|                                 | Connected     | The neutral conductor is connected.                                                               |

#### PV 1 to PV 4

| Parameter                   | Value range | Description                                                                                                                                                             |
|-----------------------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Mode</b>                 | Off         | The MPP tracker is deactivated.                                                                                                                                         |
|                             | Auto        | The inverter uses the voltage at which the max. possible output of the MPP tracker is possible.                                                                         |
|                             | Fixed       | The MPP tracker uses the voltage defined in <b>UDC fixed</b> .                                                                                                          |
| <b>UDC fixed</b>            | 150-870 V   | The inverter uses the fixed voltage that is used on the MPP tracker.                                                                                                    |
| <b>Dynamic Peak Manager</b> | Off         | Function is deactivated.                                                                                                                                                |
|                             | On          | The entire solar module string is checked for optimization potential and determines the best possible voltage for the supply of energy from the inverter into the grid. |

#### Ripple control signal

Ripple control signals are signals that are sent by the energy company in order to switch controllable loads on and off. Depending on the installation situation, ripple control signals can be dampened or amplified by the inverter. This can be counteracted if necessary by applying the following settings.

| Parameter                                     | Value range     | Description                                                         |
|-----------------------------------------------|-----------------|---------------------------------------------------------------------|
| <b>Reduction of influence</b>                 | Off             | Function is deactivated.                                            |
|                                               | On              | Function is activated.                                              |
| <b>Frequency of the ripple control signal</b> | 100-3,000 Hz    | The frequency specified by the energy company must be entered here. |
| <b>Grid inductance</b>                        | 0.00001-0.005 H | The value measured at the infeed point must be entered here.        |

**Measures to prevent FI/RCMU false alarms**  
(when using a 30 mA residual current circuit breaker)

**NOTE**

**A residual current circuit breaker for the AC connecting cable may be required depending on national regulations, the grid operator, and other conditions.**

A type A residual current circuit breaker is generally sufficient in this case. Nevertheless, false alarms can be triggered for the type A residual current circuit breaker in individual cases and depending on local conditions. For this reason, Fronius recommends using a residual current circuit breaker suitable for frequency inverters with a release current of least 100 mA, taking into account national provisions.

| Parameter                                                      | Value range               | Description                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Leakage current factor to reduce RCMU/FI false tripping</b> | 0-0.25<br>(default: 0.16) | By reducing the setting value, the leakage current is reduced and the intermediate circuit voltage is increased, which slightly lowers the efficiency.<br><ul style="list-style-type: none"> <li>- A setting value of 0.16 ensures optimum efficiency.</li> <li>- A setting value of 0 enables minimum leakage currents.</li> </ul> |
| <b>Shutdown before 30 mA FI triggers</b>                       | Off                       | The function for reducing false tripping of the residual current circuit breaker is deactivated.                                                                                                                                                                                                                                    |
|                                                                | On                        | The function for reducing false tripping of the residual current circuit breaker is activated.                                                                                                                                                                                                                                      |
| <b>Rated non-tripping fault current limit value</b>            | 0.015-0.3                 | Value of the non-tripping residual current specified by the manufacturer for the residual current circuit breaker at which the residual current circuit breaker does not switch off under specified conditions.                                                                                                                     |

**Insulation warning**

| Parameter                          | Value range | Description                                                                                                                                                                                                           |
|------------------------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Insulation warning</b>          | Off         | The insulation warning is deactivated.                                                                                                                                                                                |
|                                    | On          | The insulation warning is activated.<br>A warning is output in the event of an insulation fault.                                                                                                                      |
| <b>Insulation measurement mode</b> | Exact       | Insulation monitoring takes place with the highest degree of accuracy and the measured insulation resistance is displayed on the user interface of the inverter.                                                      |
|                                    | Fast        | Insulation monitoring takes place with a lesser degree of accuracy, whereby the time to take the insulation measurement is shortened and the insulation value is not displayed on the user interface of the inverter. |

| Parameter                                   | Value range      | Description                                                                                                  |
|---------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Threshold for the insulation warning</b> | 100<br>10,000 kΩ | If the value drops below the threshold, status code 1083 is displayed on the user interface of the inverter. |

# System

---

## General

- 1** Enter the name of the system in the input field **PV System Name** (max. 30 characters).
  - 2** Select the **Timezone Region** and **Timezone Location** in the drop-down lists.
  - 3** Click **Save**.
- ✓ *System name, time zone, and time zone location are saved.*
- 

## Update

All available updates for inverters and other Fronius devices are provided on the product pages and in the "Fronius Download Search" area at [www.fronius.com](http://www.fronius.com).

### Update

- 1** Drag the firmware file into the **Drag & drop file here** field, or select via **Browse file**.
- ✓ *Update is started.*
- 

## Setup wizard

The guided setup wizard can be accessed here.

---

## Restoring factory settings

### All settings

Resets all configuration data, apart from the country setup. Changes to the country setup may only be made by authorized personnel.

### All settings without network

Resets all configuration data, apart from the country setup and the network settings. Changes to the country setup may only be made by authorized personnel.

---

## Event log

**Current messages** All current events of the linked system components are displayed here.

### IMPORTANT!

Depending on the type of event, this must be confirmed via the "tick" button so that it can be further processed.

### History

All events of the linked system components that are no longer present are displayed here.

---

## Information

All the information regarding the system and the current settings is displayed and provided for download in this menu area.

---

## License Manager

The power data and functional scope of the inverter are stored in the license file. If the inverter, DC power stage set PC board, or data communication area is replaced, the license file must also be replaced.

---

## Licensing

### Licensing - online (recommended)

This requires an Internet connection and a completed Fronius Solar.web configuration.

- 1 Finish all installation work (refer to the chapter headed [Closing the inverter's connection area/housing cover, and commissioning](#) on page 53).
- 2 Establish a connection to the user interface of the inverter.
- 3 Enter the serial number and verification code (VCode) of the defective and replacement device. The serial number and VCode can be found on the rating plate of the inverter (refer to the chapter headed [Information on the device](#) on page 14).
- 4 Click the **Start online licensing** button.
- 5 Skip past the Terms and conditions of use and Network settings menu items by clicking **Next**.

✓ *License activation is started.*

### Licensing - offline

There must be no Internet connection in this case. If offline licensing is carried out while there is an active Internet connection, the license file is automatically loaded onto the inverter, resulting in the following error when the license file is uploaded: "The license has already been installed and the wizard can be closed".

- 1 Finish all installation work (refer to the chapter headed [Closing the inverter's connection area/housing cover, and commissioning](#) on page 53).
- 2 Establish a connection to the user interface of the inverter.
- 3 Enter the serial number and verification code (VCode) of the defective and replacement device. The serial number and VCode can be found on the rating plate of the inverter (refer to the chapter headed [Information on the device](#) on page 14).
- 4 Click the **Start offline licensing** button.
- 5 Download the service file onto the mobile device by clicking the **Download service file** button.
- 6 Open [licensemanager.solarweb.com](https://licensemanager.solarweb.com) and log in with username and password.
- 7 Drag the service file into the **Drag service file here or click to upload** field or click to upload it.
- 8 Download the newly generated license file onto the mobile device by clicking the **Download license file** button.
- 9 Switch to the user interface of the inverter and drag the license file into the **Drag & drop license file here** field or select via **Choose license file**.

✓ *License activation is started.*

---

## Support

### Activating the support user

- 1 Click the **Enable Support User Account** button.

✓ *The support user is activated.*

### IMPORTANT!

The support user exclusively enables Fronius Technical Support to configure settings on the inverter via a secure connection. Access is deactivated by clicking the **Terminate Support User Session** button.

---

### **Generating support info** (for Fronius Support)

- 1** Click the **Generate support info** button.
- 2** The sdp.cry file is downloaded automatically. For manual download, click the **Download support info** button.

✓ *The sdp.cry file is saved in the downloads.*

---

### **Activating remote access**

- 1** Click the **Activate Remote Access** button.

✓ *Remote access is activated for Fronius Support.*

### **IMPORTANT!**

The remote access exclusively enables Fronius Technical Support to access the inverter via a secure connection. In this case, diagnostics data are transmitted, which are used for troubleshooting. The remote access can be activated only upon request by Fronius Support.

# Communication

## Network


### Server addresses for data transfer

If a firewall is used for outgoing connections, allow the below protocols, server addresses, and ports for successful data transfer, see:

[https://www.fronius.com/~/downloads/Solar%20Energy/Firmware/SE\\_FW\\_Changelog\\_Firewall\\_Rules\\_EN.pdf](https://www.fronius.com/~/downloads/Solar%20Energy/Firmware/SE_FW_Changelog_Firewall_Rules_EN.pdf)

When using FRITZ!Box products, configure Internet access without any restrictions or limitations. Do not set the DHCP Lease Time (validity) to 0 (=infinite).

### LAN:



### Establishing a connection:

- 1 Enter the host name.
- 2 Select the connection type: **Automatic** or **Static**.
- 3 For the **Static** connection type, enter the IP address, subnet mask, DNS, and gateway.
- 4 Click the **Connect** button.

✓ *The connection is established.*

After establishing the connection, check the connection status.

### WiFi:



### Establishing a connection via WPS:

- ☐ Activate the access point of the inverter. This is opened by touching the sensor  > Communications LED flashes blue
- 1 Establish the connection to the inverter in the network settings (the inverter is displayed with the name "FRONIUS\_" and the serial number of the device).
  - 2 Enter the password from the rating plate and confirm.  
**IMPORTANT!**  
To enter the password, first select the **Connect using a security key instead** link in order to establish the connection with the password.
  - 3 Enter the IP address 192.168.250.181 in the address bar of the browser and confirm.
  - 4 In the **Communication > Network > WLAN > WPS** menu area, click the **Activate** button.
  - 5 Activate WPS on the WiFi router (see WiFi router documentation).
  - 6 Click on the **Start** button. The connection is established automatically.
  - 7 Log in to the user interface of the inverter.
  - 8 Check the network details and connection to Fronius Solar.web.

After connecting, the status of the connection should be checked.

### Selecting and connecting to a WiFi network:

The networks found are displayed in the list. Click the refresh button ↻ to perform a new search for available WiFi networks. If necessary, restrict the selection list further via the **Search network** input field.

- 1 Select network from the list.
- 2 Select the connection type: **Automatic** or **Static**.
- 3 For the **Automatic** connection type, enter the WiFi password and host name.
- 4 For the **Static** connection type, enter the IP address, subnet mask, DNS, and gateway.
- 5 Click the **Connect** button.

✓ *The connection is established.*

After establishing the connection, check the connection status.

### Access point:



The inverter serves as the access point. A PC or mobile device connects directly to the inverter. Connecting to the Internet is not possible. Assign a **Network Name (SSID)** and **Network Key (PSK)** to establish a connection. Assign a **Network Key (PSK)** with at least 20 characters, consisting of upper and lower case letters, special characters, and numbers, to protect the device from unauthorized access.

It is possible to operate a connection via WiFi and via the access point at the same time.

## Modbus

The inverter communicates with system components (e.g., Fronius Smart Meter) and other inverters via Modbus. The primary device (Modbus Client) sends control commands to the secondary device (Modbus Server). The control commands are executed by the secondary device.

### RTU Server

The following input fields and functions are available for communication via Modbus RTU:

---

#### Meter address offset

The value entered (1-247) is the identification number (unit ID) assigned to the meter.

Factory setting: 200

---

#### Inverter address

The value entered (1-247) is the identification number (unit ID) assigned to the inverter.

Factory setting: 1

---

#### SunSpec Model Type

There are two different settings, depending on the SunSpec model.

**float:** SunSpec Inverter Model 111, 112, 113 or 211, 212, 213.

**int + SF:** SunSpec Inverter Model 101, 102, 103 or 201, 202, 203.

---

---

**Interface**

Select one of the two interfaces **Modbus 0 (M0) RTU** or **Modbus 1 (M1) RTU**.

---

**Baud Rate**

The baud rate influences the speed of the transmission between the individual components connected in the system. When selecting the baud rate, it should be ensured that this is the same on the transmit and receive side.

---

**Parity**

The parity bit can be used for parity checks. This is used to identify transmission errors. In this case, a parity bit can ensure a specified number of bits. The value (0 or 1) of the parity bit must be calculated at the transmitter, and is checked at the receiver using the same calculation. The calculation of the parity bit can be carried out for even or odd parity.

---

**Allow Control**

If this option is activated, the inverter is controlled via Modbus. Inverter control includes the following functions:

- On/off
  - Power reduction
  - Setting a constant power factor (cos phi)
  - Setting a constant reactive power
  - Battery control settings with battery
- 

**TCP Server**

The following input fields and functions are available for communication via Modbus TCP:

---

**Meter address offset**

The value entered (1-247) is the identification number (unit ID) assigned to the meter.

Factory setting: 200

---

**SunSpec Model Type**

There are two different settings, depending on the SunSpec model.

**float:** SunSpec Inverter Model 111, 112, 113 or 211, 212, 213.

**int + SF:** SunSpec Inverter Model 101, 102, 103 or 201, 202, 203.

---

**Modbus port**

Number of the TCP port (502 or 1502) to be used for Modbus communication.

---

**Meter Address**

The value entered is the identification number (unit ID) assigned to the meter, which can be found on the user interface of the inverter in the **Communication > Modbus** menu area.

Factory setting: 200

---

**Allow Control**

If this option is activated, the inverter is controlled via Modbus. Inverter control includes the following functions:

- On/off
  - Power reduction
  - Setting a constant power factor (cos phi)
  - Setting a constant reactive power
  - Battery control settings with battery
-

---

**Restrict Control**

Restrict the control of the inverter to a device with a fixed IP address.

---

**Cloud control**

The utility/energy supplier can influence the output power of the inverter with **Cloud control**. This requires the inverter to have an active Internet connection.

| Parameter            | Display | Description                                   |
|----------------------|---------|-----------------------------------------------|
| <b>Cloud control</b> | Off     | Cloud control of the inverter is deactivated. |
|                      | On      | Cloud control of the inverter is activated.   |

| Profile                                                         | Value range               | Description                                                                                                                                                                                                                                          |
|-----------------------------------------------------------------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Allow cloud control for regulatory purposes (Technician)</b> | Deactivated/<br>Activated | The function may be mandatory for proper operation of the system.*                                                                                                                                                                                   |
| <b>Allow cloud control for Virtual Power Plants (Customer)</b>  | Deactivated/<br>Activated | If the <b>Allow remote control for regulatory purposes (technician)</b> function is activated (technician access required), the <b>Allow remote control for virtual power plants</b> function is automatically activated and cannot be deactivated.* |

**\* Cloud control**

A virtual power plant is an interconnection of multiple generators. This virtual power plant can be controlled by means of the cloud control via the Internet. An active inverter Internet connection is a prerequisite for this. System data are transferred.

**Solar API**

The **Solar API** is an IP-based, open JSON interface. If enabled, IOT devices in the local network may access inverter information without authentication. For security reasons, the interface is disabled in the factory. Activate the interface manually if it is required for a third-party application (e.g., EV charger, smart home solutions, etc.). If there is a Fronius Wattpilot in the network, the inverter automatically activates the **Solar API**.

Fronius recommends using Fronius Solar.web for monitoring and analyzing the inverter and connected system components.

In the event of a firmware update to version 1.14.x, the Solar API setting is applied. In systems with a version below 1.14.x, the Solar API is activated; with higher versions, it is deactivated but can be switched on and off via the menu.

**Manually activating the Fronius Solar API**

On the user interface of the inverter in the **Communication > Solar API** menu area, activate the function **Activate communication via Solar API**.

**Fronius Solar.web**

In this menu, you can agree to the technically necessary data processing or reject it.

In addition, the transfer of analysis data and remote configuration via Fronius Solar.web can be enabled or disabled.

# Safety and grid requirements

## Country setup



### WARNING

#### **Danger from unauthorized fault analyses and repair work.**

This can result in serious injury and damage to property.

- ▶ Fault analyses and repair work on the PV system may only be carried out by installers/service technicians from authorized specialist companies in accordance with national standards and regulations.

### NOTE

#### **Risk due to unauthorized access.**

Incorrectly set parameters can have a negative effect on the public grid and/or the grid power feed operation of the inverter and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Do not give the access code to third parties and/or unauthorized persons.

### NOTE

#### **Risk due to incorrectly set parameters.**

Incorrectly set parameters can have a negative effect on the public grid and/or cause inverter malfunctions and failures and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Parameters may only be adjusted if this has been approved or requested by the utility.
- ▶ Any parameter adjustments must be made in compliance with nationally applicable standards and/or directives as well as the specifications of the utility.

The **Country Setup** menu area is intended exclusively for installers/service technicians from authorized specialist companies. To apply for the access code required for this menu area, see chapter [Requesting inverter codes in Solar.SOS](#).

The selected country setup for the country in question contains preset parameters in accordance with nationally applicable standards and requirements. Changes may need to be made to the selected country setup depending on local grid conditions and the specifications of the utility.

## Requesting inverter codes in Solar.SOS

The **Country Setup** menu area is intended exclusively for installers/service technicians from authorized specialist companies. The inverter access code required for this menu area can be requested in the Fronius Solar.SOS portal.

Requesting inverter codes in Fronius Solar.SOS:

- 1 Open [solar-sos.fronius.com](https://solar-sos.fronius.com) in the browser
- 2 Log in with your Fronius account
- 3 At the top right, click on the drop-down menu

- 4 Select the **Show inverter codes** menu item
  - ✓ A contract page appears on which the request for the access code to change the grid parameters for Fronius inverters is located
- 5 Accept the terms and conditions of use by checking **Yes, I have read and agree to the terms of use** and click **Confirm & Save**
- 6 After that, the codes can be retrieved in the drop-down menu at the top right under **Show inverter codes**



#### CAUTION

##### **Risk due to unauthorized access.**

Incorrectly set parameters can have a negative effect on the public grid and/or the grid power feed operation of the inverter and result in the loss of standard conformity.

- ▶ Parameters may only be adjusted by installers/service technicians from authorized specialist companies.
- ▶ Do not give the access code to third parties and/or unauthorized persons.

#### **Absolute Generation Limit**

Activating this function limits the output power of the inverter to the specified value in watts.

#### **Import limitation**

Energy companies or grid operators can prescribe import limitations for inverters. The amperage is limited to the set value.

- 1 Under **Limit** select **Current Limitation**.
- 2 Enter the **limit value** in amperes.
- 3 Click on **Save**.

#### **Feed-in limit**

Energy companies or grid operators can prescribe feed-in limits for inverters (e.g., max. 70% of the kWp or max. 5 kW). The inverter limits the active power at the grid connection point (installation location of the Fronius Smart Meter or primary meter) to the set value.

The inverter takes account of self-consumption in the household before the power is reduced. An individual limit can be set.

In order to minimize the yield losses due to the power of feeding in limitation, the power available from the module array can be:

- Used for controllable system components, such as Fronius Ohmpilot or Fronius Wattpilot
- Used by loads controlled via I/Os

If these possibilities have been exhausted, the power drawn from the module array is reduced to such an extent that the feed-in limit is not exceeded.

Installation variants with an inverter, Fronius Smart Meter, and system components are listed under [Components](#).

##### **Total DC power of the system**

The input field for the total DC power of the entire system in Wp. Always enter this value if the **Maximum grid feed-in power** is specified in %.

#### **Power Control** deactivated

The inverter converts all available PV energy.

#### **Power Control** activated

Feeding in limited with the following selection options:

- **Total Power Limit**  
Set the value of the permissible total power of feeding in for the photovoltaic system.
- **Limit per phase - asymmetric generation**  
The inverter determines the optimum per phase. The inverter regulates the individual phases in such a way that none of the phases exceeds the set value.
- **Limit per phase - weakest phase**  
The inverter measures each individual phase. If the permissible feed-in limit is exceeded on one phase, the inverter symmetrically reduces the total power for all phases until the limit is reached.

**IMPORTANT!** Implement the settings for **Limit per phase** if national standards and regulations require a limitation of the single-phase power. Set the value for the permissible power of feeding in for each phase.

**IMPORTANT!** **Power Control** settings are automatically applied for the dynamic feed-in limit of I/O power management. **Total Power Limit** is the default configuration.

#### **Dynamic feed-in limit (Soft Limit)**

If this value is exceeded, the inverter readjusts down to the set value.

#### **Export Limit Protection ( $P_{AV,E}$ protection)**

This function monitors compliance with the feed-in limit. If **Dynamic feed-in limit (Soft Limit)** is activated, the inverter controls the power of feeding in in such a way that this function is usually not activated. If the specified limit values and the switch-off times are exceeded, this protection function disconnects the inverter from the grid.

The **Maximum grid feed-in power ( $P_{AV,E}$ )** in the case of an asymmetric feed-in (**Limit per phase - asymmetric generation** or **Limit per phase - weakest phase**) can be combined with the export limit protection ( $P_{AV,E}$  protection) function. The **Maximum grid feed-in power** is calculated as follows: **Maximum grid feed-in power per phase ( $P_{AV,E}$ )** × 3.

The export limit protection ( $P_{AV,E}$  protection) function is only possible if a Smart Meter IP configured with MQTT is installed at the feed-in point.

#### **Export Limit Protection (Hard Limit Trip)**

**IMPORTANT!** This function is only available if **Dynamic feed-in limit (Soft Limit)** is activated.

#### **Maximum grid feed-in power**

Input field for the **Maximum grid feed-in power** in W or % (setting range: -10 % to 100 %).

If there is no meter in the system or if the primary meter has failed, the inverter limits its output power to the set value.


If this value is exceeded, the inverter switches off within max. 5 s. This value must be higher than the value set for **Dynamic feed-in limit (Soft Limit)**.

If required, enable the fail-safe function **Reduce inverter power to 0% if meter connection has been lost**. When this function is enabled, the inverter activates standby mode. No feed-in takes place.

The use of WiFi for communication between the Fronius Smart Meter and the inverter is not recommended with the fail-safe function activated at the same time. Even short-term disconnections can cause the inverter to shut down. This problem arises with weak WiFi signal strengths, a slow or overloaded WiFi connection, and automatic channel selection of the router.

## Feed-in limit - examples

### "Total Power Limit" (feed-in limit 0 kW)

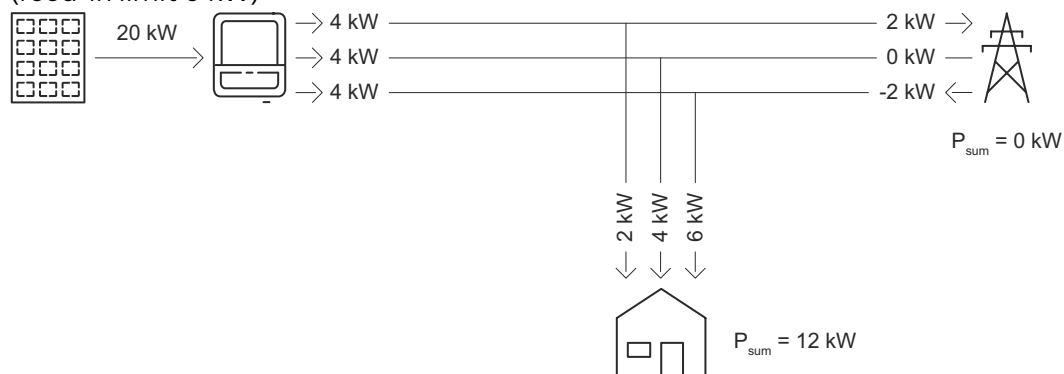


### Explanation

No power (0 kW) may be fed into the public grid at the grid feed-in point. The load requirement in the home network (12 kW) is supplied by the power generated by the inverter.

### "Limit per phase - asymmetric generation"

(feed-in limit 0 kW per phase) - asymmetric

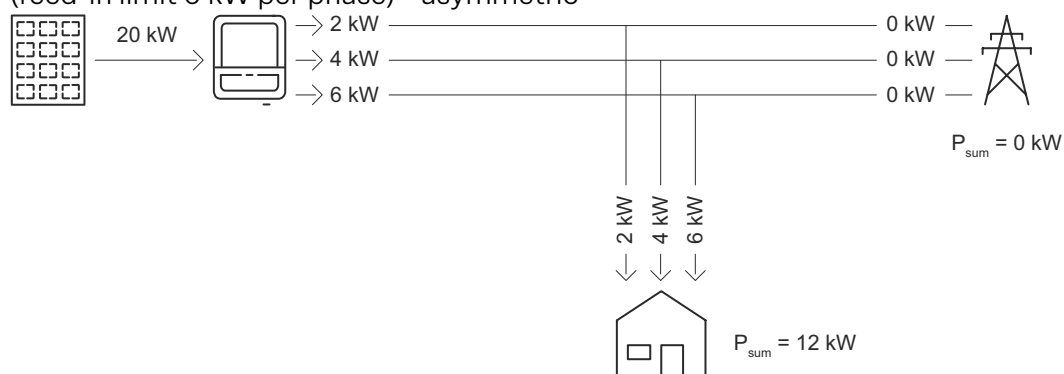


### Explanation

The load requirement in the home network per phase is determined and supplied.

### "Limit per phase - asymmetric generation"

(feed-in limit 1 kW per phase) - asymmetric

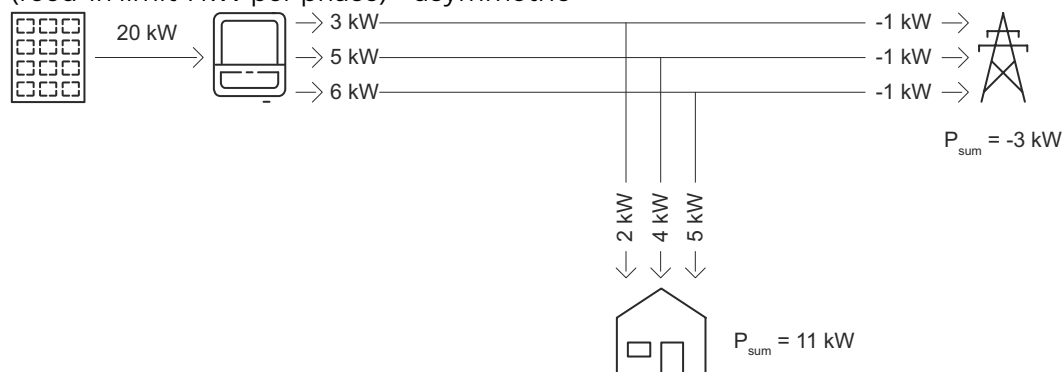


### Explanation

The load requirement in the home network per phase is determined and supplied. In addition, the excess production (1 kW per phase) is fed into the public grid in accordance with the maximum permitted feed-in limit.

#### "Limit per phase - weakest phase"

(feed-in limit 0 kW per phase) – symmetrical

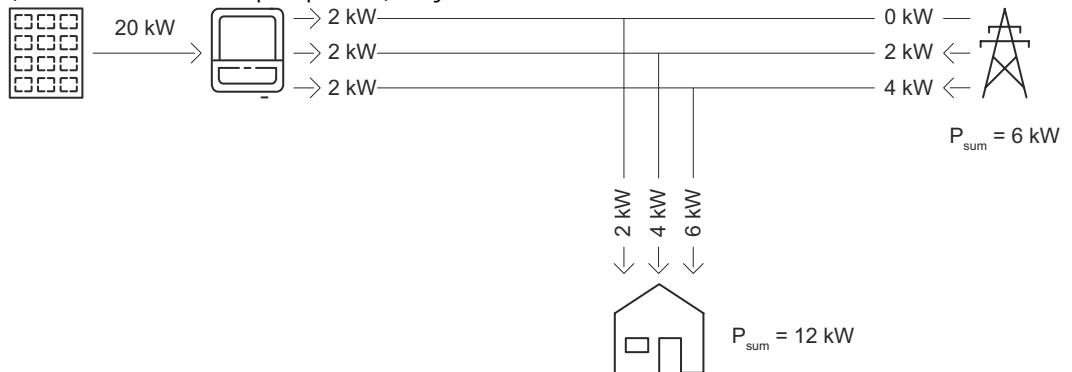


### Explanation

The weakest phase in the load requirement in the home network is determined (phase 1 = 2 kW). The result of the weakest phase (2 kW) is applied to all phases. Phase 1 (2 kW) can be supplied. Phase 2 (4 kW) and phase 3 (6 kW) cannot be supplied, power from the public grid is required (phase 2 = 2 kW, phase 3 = 4 kW).

#### "Limit per phase - weakest phase"

(feed-in limit 1 kW per phase) – symmetrical

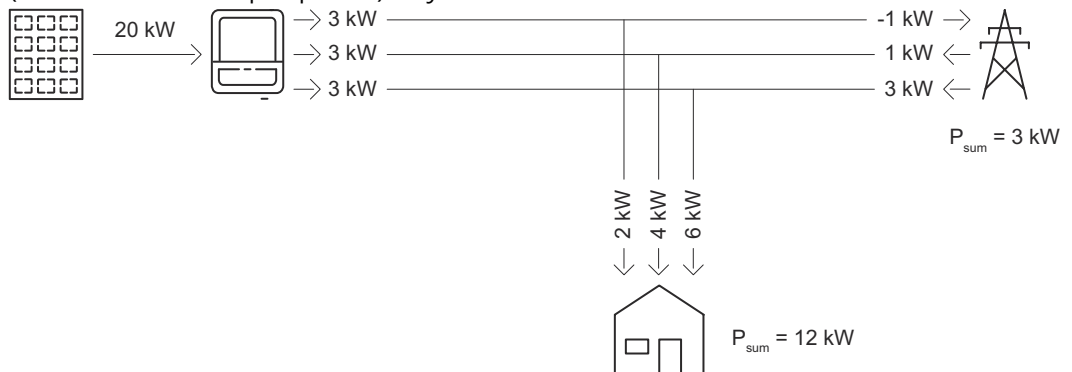

### Explanation

The weakest phase in the load requirement in the home network is determined (phase 1 = 2 kW) and the max. permitted feed-in limit (1 kW) is added. The result of the weakest phase (2 kW) is applied to all phases. Phase 1 (2 kW) can be supplied. Phase 2 (4 kW) and phase 3 (6 kW) cannot be supplied, power from the public grid is required (phase 2 = 1 kW, phase 3 = 3 kW).

## Multiple Inverter Control


**IMPORTANT!** To view and change settings in this menu item, select the **Technician** user. Enter and confirm the password for the **Technician** user. Settings in this menu area may only be made by trained and qualified personnel.

The inverter can be used as a primary device to control dynamic feed-in limits for additional Fronius inverters (secondary devices) so that feed-in limits prescribed by energy companies or utilities can be centrally managed. This control refers to the **Soft Limit** feed-in limit see [Feed-in limit](#). To do so, the following requirements must be met:

- A Fronius Smart Meter is configured as a primary meter and connected to the master.
- **Power Control** is activated and configured in the **Feed-in limit** menu on the user interface of the primary device. The power control limit is set to **Total Power Limit**.
- Master and secondary device(s) are physically connected to the same network router via LAN.
- If **Use Modbus TCP** is enabled, the inverter control via Modbus TCP must be activated and configured for all secondary devices.

**IMPORTANT!** Only one primary meter is required for the primary device.

**IMPORTANT!** If an inverter with a battery is connected, use this inverter as the primary device for **Multiple Inverter Control**.

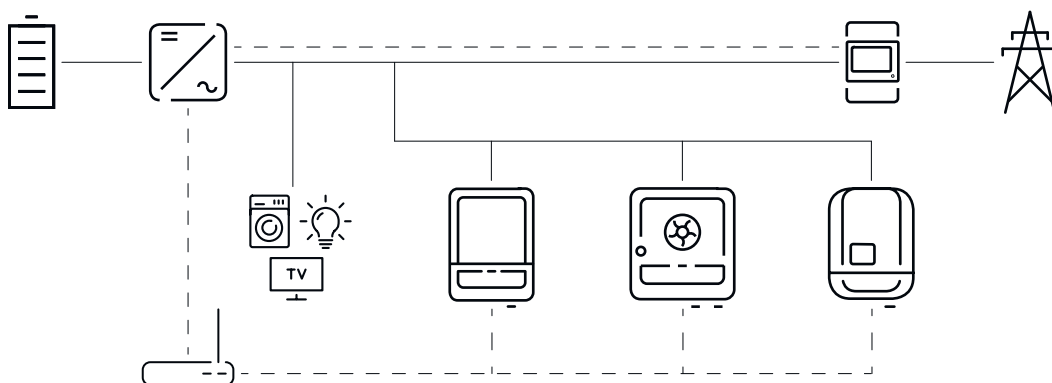

Example connection diagram for Multiple Inverter Control

### System limits

- Systems with a maximum of 20 inverters (1 primary device + 19 secondary devices) are supported if the **Use Modbus TCP** function is activated. Otherwise, a maximum of one primary device and two secondary devices are supported.
- The control system is designed for photovoltaic systems with a total output of up to 300 kW.
- In the case of larger system capacities, the control times in the system are extended.
- The use of a plant controller is recommended for systems >300 kW.

### External grid and system protection

- Regional standards and guidelines may require the installation of external grid and system protection for systems >30 kVA.
- External grid and system protection can be omitted under the following conditions:
  - A Fronius Smart Meter IP performs the external voltage measurement.
  - The Fronius Smart Meter IP communicates with the primary device via the MQTT protocol.
  - In the country setup, select **On at Smart Meter** from the **Long Time Average Limit** menu.
  - On the user interface of the secondary device, the **Use Modbus TCP** function is disabled.

**Multiple Inverter Control** is available for the following device combinations:

| Primary devices     | Secondary devices                                                                                                                                             |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| GEN24, Verto, Tauro | <ul style="list-style-type: none"><li>- GEN24</li><li>- Verto</li><li>- Tauro</li><li>- Argeno</li><li>- SnapINverter with Fronius Datamanager 2.0*</li></ul> |

\* Up to four additional SnapINverters can be connected to each SnapINverter with Fronius Datamanager 2.0.

### Primary meter

One Fronius Smart Meter acts as the only primary meter and is connected directly to the primary device. This Smart Meter measures the total output power of all inverters into the grid and passes this information to the primary device.

### Primary device

Configure the feed-in limit on the user interface of the inverter:

- 1 In the **Safety and Grid Regulations > Feed-in limit** menu area, activate the **Power Control** function and Select **Total Power Limit**.
- 2 Configure the country-specific settings.
- 3 In the **Safety and Grid Regulations > Multiple Inverter Control** menu area, activate the **Multiple Inverter Control** function.  
The primary device automatically scans the network for available secondary devices.  
✓ A list shows the inverters found.

To perform the search again, press the Refresh button .

If **Use Modbus TCP** is activated, it is also possible to select Fronius SnapINverters with Datamanager 2.0 and Fronius Argeno with **Use Inverter**.

- 4 Activate **Use Inverter** against all secondary devices to which a common feed-in limit applies. Click **Use all Inverters** to enable the function for the primary device and all secondary devices.

The status of the inverters listed is displayed as follows:

- **Inactive:** Secondary device is not configured for the power control or a firmware update is required.
- **Disconnected:** Secondary device is configured, network connection not possible.
- **Connected:** Secondary device is configured and accessible via the network of the primary device.

- 5 In the **Safety and Grid Regulations > I/O Power Management** menu area, set the controlling priorities as follows:
  1. **I/O Power Limit**
  2. **Feed-in limit**
  3. **Modbus Control**

### Adding Fronius Argeno and other inverters manually

- 1 In the **Multiple Inverter Control** menu, select the **Multiple Inverter Control** function.
- 2 Select additional inverters and click **+ Add**.
- 3 Enter the name, hostname or IP address, and the Modbus address of the secondary device.
- 4 Click **Add**.

For more information on configuring the Fronius Argento or Fronius Dataman-ager 2.0 as a secondary device, refer to the respective operating instructions.

### Secondary device

Each secondary device takes over the settings for the feed-in limit from the primary device. A secondary device does not transmit any data for the feed-in limit to the primary device. To do so, the following requirements must be met:

- **Multiple Inverter Control** is activated and configured in the **Multiple Inverter Control** menu on the user interface of the primary device.

Set the following configurations for the feed-in limit on the secondary device:

### User interface secondary device GEN24 / Verto / Tauro

- 1 Select the user **Technician** and enter the password for the user **Technician**.

Only carry out work steps 2 and 3 if **Use Modbus TCP** is activated on the primary device.

- 2 In the **Communication > Modbus** menu area, activate the **TCP Server** mode and the **Allow Control** function.
- 3 For a fail-safe scenario, in the **Safety and Grid Regulations > I/O Power Management** menu area, set the controlling priorities as follows:
  1. **Modbus Control**
  2. **Feed-in limit**
  3. **I/O Power Limit**
- 4 In the **Safety and Grid Regulations > Feed-in limit** menu area, select and edit the following settings:
  - Enable the **Power Control** function.
  - Select **Total Power Limit** and specify the **Total DC power of the system** in watts.
  - Activate the **Dynamic feed-in limit (Soft Limit)** and enter a value of 0 W for the **Maximum grid feed-in power**.
  - Enable the **Reduce inverter power to 0% if meter connection has been lost** function.

---

## I/O Power Management

### General

Settings relevant to the grid operator are defined as rules under this menu item. This relates to an effective power limit in % or watts and/or a power factor specification. To view and change settings, select the **Technician** user, and enter and confirm the password. Only technical specialists may make settings in this menu area.

Under **Rules**, expand a menu area (e.g., **Rule 1**). Configure the following settings:

### Limitation

#### IMPORTANT!

A dynamic feed-in limit for several inverters can be configured under [Feed-in limit](#). I/O power management rules are transferred from the inverter (primary device) to connected inverters in the system (secondary devices).

Select the following rules for power management:

- **I/O Generation Limit (%)**: The total output power of the connected inverter is statically limited to the defined value of the absolute rated power.
- **Export Limit Control (W)**: The active power fed in at the grid connection point is limited to the set value (e.g., 5000 watts). The output powers of the inverters (primary and secondary devices) are dynamically adjusted depending on their self-consumption.
- **Shutdown single device**: The inverter stops grid power feed operation and switches to standby mode.

### IMPORTANT!

The rules for shutdown apply to this device and cannot be applied to other inverters in the system.

### Input pattern (assignment of individual I/Os)

1 click = white, contact open

2 clicks = blue, contact closed

3 clicks = gray, not used

### Power Factor ( $\cos \varphi$ ) (define value)

### Impedance response

- **Capacitive**
- **Inductive**

### DNO Feedback

If the rule is activated, always configure the **DNO Feedback** output, e.g., for operating a signal device.

The **Import** and **Export** of defined rules can be carried out in the data format \*.fpc. The rules and pin assignments in the following connection examples are not the only possible configurations. For pin assignment, take into account the available connections at the [Data communication area](#) and settings of the device configuration.

If there is an active rule for the control of the inverter, the device indicates this in the **overview** of the user interface under **Device State**.

---

### Controlling Priorities

Used to set controlling priorities for I/O Power Management (DRM or ripple control receiver), the feed-in limit, and control via Modbus.

1 = highest priority, 3 = lowest priority

Local priorities of the I/O power management, the feed-in limit, and the Modbus interface are deactivated by cloud control commands (regulatory purposes and virtual power plants) – see [Cloud control](#) – and by backup power.

In terms of controlling priorities, the device differentiates between **power control** and **inverter shutdown**. Inverter shutdown always takes precedence over power control. An inverter shutdown command is always executed and does not need to be prioritized.

### Power control

- I/O Power Management (DRM/ripple control receiver signal) – according to command
- Export Limitation (Soft Limit) – always active
- Modbus (generation limit) – according to command


### Inverter shutdown

- Shutdown single device
- Export Limitation (Hard Limit)
- Modbus (shutdown command) – according to command

### 4-relay connection example

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram.

For distances greater than 10 m between the inverter and the ripple control signal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the terminal of the data communication area (SHIELD).

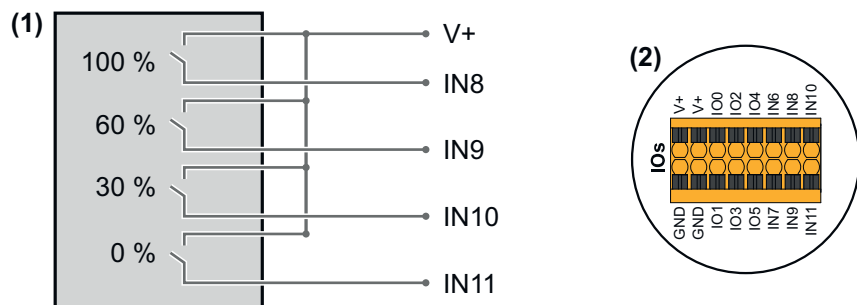

- (1) Ripple control signal receiver with 4 relays for effective power limitation.  
(2) I/O connection terminals of the data communication area.

### Use pre-configured file for 4-relay operation:

- 1 Download the file (.fpc) under [4-relay operation](#) to the mobile device.
- 2 Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
- 3 Click **Save**.

✓ The settings for 4-relay operation are saved.

# I/O power management settings – 4 relay example

## I/O Power Management

V+/GND

V+

V+

GND

GND

I/O

0

2

4

6

8

10

1

3

5

7

9

11

I

0

2

4

6

8

10

1

3

5

7

9

11

DNO feedback pin  
Not used

Rules

+ Add

Rule 1

0

2

4

6

8

10

1

3

5

7

9

11

Limitation  
I/O Generation Limit (%)

Active Power \*

100

%

Power Factor (cos  $\phi$ ) \*

1

Impedance response

Capacitive

DNO Feedback

Rule 2

0

2

4

6

8

10

1

3

5

7

9

11

Limitation  
I/O Generation Limit (%)

Active Power \*

60

%

Power Factor (cos  $\phi$ ) \*

1

Impedance response

Capacitive

DNO Feedback

Rule 3

0

2

4

6

8

10

1

3

5

7

9

11

Limitation  
I/O Generation Limit (%)

Active Power \*

30

%

Power Factor (cos  $\phi$ ) \*

1

Impedance response

Capacitive

DNO Feedback

Rule 4

0

2

4

6

8

10

1

3

5

7

9

11

Limitation  
I/O Generation Limit (%)

Active Power \*

0

%

Power Factor (cos  $\phi$ ) \*

1

Impedance response

Capacitive

DNO Feedback

Import

Export

0

 Activate Backup interlock

1

 Rule 1

2

 None

3

 None

4

 None

5

 None

6

 Open grid relais feedback

7

 Backup interlock feedback

8

 I/O control

9

 I/O control

10

 I/O control


11

 I/O control

## 3-relay connection example

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram.

For distances greater than 10 m between the inverter and the ripple control signal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the terminal of the data communication area (SHIELD).

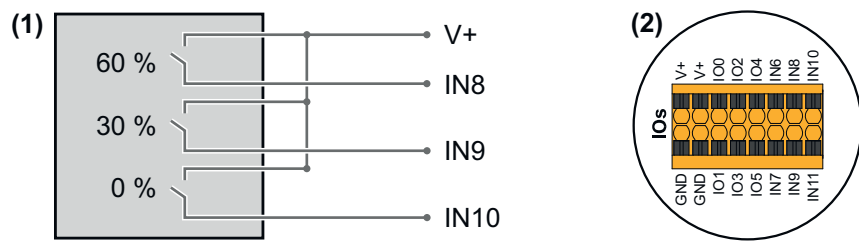

- (1) Ripple control signal receiver with 3 relays for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 3-relay operation:**

- 1** Download the file (.fpc) under [3-relay operation](#) to the mobile device.
- 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
- 3** Click **Save**.

✓ The settings for 3-relay operation are saved.

I/O power management settings – 3 relay example

I/O Power Management

V+/GND

V+

V+

0

2

4

6

8

10

GND

GND

1

3

5

7

9

11

I

DNO feedback pin  
Not used

Rules

+ Add

Rule 1

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*  
100

Power Factor (cos φ) \*  
1

Impedance response  
Capacitive

DNO Feedback

Rule 2

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*  
60

Power Factor (cos φ) \*  
1

Impedance response  
Capacitive

DNO Feedback

Rule 3

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*  
30

Power Factor (cos φ) \*  
1

Impedance response  
Capacitive

DNO Feedback

Rule 4

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*  
0

Power Factor (cos φ) \*  
1

Impedance response  
Capacitive

DNO Feedback

Import

Export

0

1

2

3

4

5

6

7

8

9

10

11

0

1

2

3

4

5

6

7

8

9

10

11

Activate Backup interlock

Rule 1

None

None

None

None

Open grid relais feedback

Backup interlock feedback

I/O control

I/O control


I/O control

None

2-relay connection example

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram.  
For distances greater than 10 m between the inverter and the ripple control sig-

nal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the terminal of the data communication area (SHIELD).

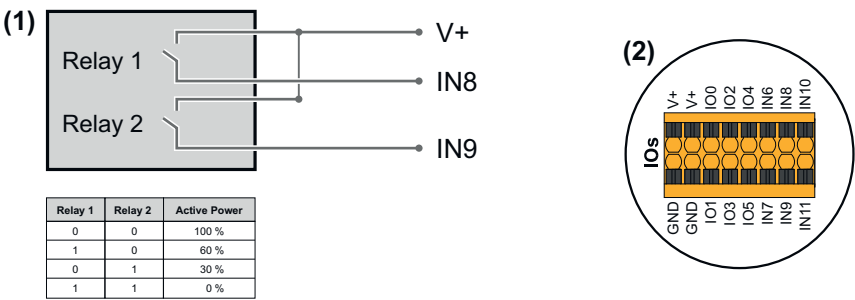

- (1) Ripple control signal receiver with 2 relays for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 2-relay operation:**

- 1 Download the file (.fpc) under [2-relay operation](#) to the mobile device.
  - 2 Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
  - 3 Click **Save**.
- ✓ The settings for 2-relay operation are saved.

I/O power management settings – 2 relay example

I/O Power Management

V+/GND

V+

V-

GND

I/O

0

2

4

6

8

10

1

3

5

7

9

11

I

0

2

4

6

8

10

1

3

5

7

9

11

DNO feedback pin  
Not used

Rules

+ Add

Rule 1

0 2 4 6 8 10

1 3 5 7 9 11

Limitation

I/O Generation Limit (%)

Active Power \* 100 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

Rule 2

0 2 4 6 8 10

1 3 5 7 9 11

Limitation

I/O Generation Limit (%)

Active Power \* 60 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

Rule 3

0 2 4 6 8 10

1 3 5 7 9 11

Limitation

I/O Generation Limit (%)

Active Power \* 30 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

Rule 4

0 2 4 6 8 10

1 3 5 7 9 11

Limitation

I/O Generation Limit (%)

Active Power \* 0 %

Power Factor (cos φ) \* 1 Impedance response Capacitive

DNO Feedback

Import

Export

0 Activate Backup interlock

1 Rule 1

2 None

3 None

4 None

5 None

6 Open grid relais feedback

7 Backup interlock feedback

8 I/O control

9 I/O control

10 None

11 None

1-relay connection example

Connect the ripple control signal receiver and the I/O terminals of the inverter to one another as shown in the connection diagram.  
For distances greater than 10 m between the inverter and the ripple control signal receiver, use a shielded data communication cable (CAT 5 or higher) with twisted cable pairs. Connect the shielding on one side to the terminal of the data communication area (SHIELD).



- (1) Ripple control signal receiver with 1 relay for effective power limitation.
- (2) I/O connection terminals of the data communication area.

**Use pre-configured file for 1-relay operation:**

- 1** Download the file (.fpc) under [1-relay operation](#) to the mobile device.
- 2** Upload the file (.fpc) in the **I/O Power Management** menu area by clicking the **Import** button.
- 3** Click **Save**.

✓ *The settings for 1-relay operation are saved.*

I/O power management settings – 1 relay example

I/O Power Management

V+/GND

I/O

I

|     |     |   |   |   |   |   |    |
|-----|-----|---|---|---|---|---|----|
| V+  | V+  | 0 | 2 | 4 | 6 | 8 | 10 |
| GND | GND | 1 | 3 | 5 | 7 | 9 | 11 |

DNO feedback pin  
Not used

Rules

+ Add

Rule 1

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*

100

%

Power Factor (cos φ) \*

1

Impedance response

Capacitive

DNO Feedback

Rule 2

0

2

4

6

8

10

1

3

5

7

9

11

Limitation

I/O Generation Limit (%)

Active Power \*

0

%

Power Factor (cos φ) \*

1

Impedance response

Capacitive

DNO Feedback

Import

Export

0

1

2

3

4

5

6

7

8

9

10

11

0

1

2

3

4

5

6

7

8

9

10

11

Activate Backup interlock

Rule 1

None

None

None

None

Open grid relais feedback

Backup interlock feedback

I/O control

None


None

None

Connecting the ripple control receiver with several inverters

The grid operator may request the connection of one or more inverters to a ripple control receiver in order to limit the active power and/or the power factor of the photovoltaic system.

89

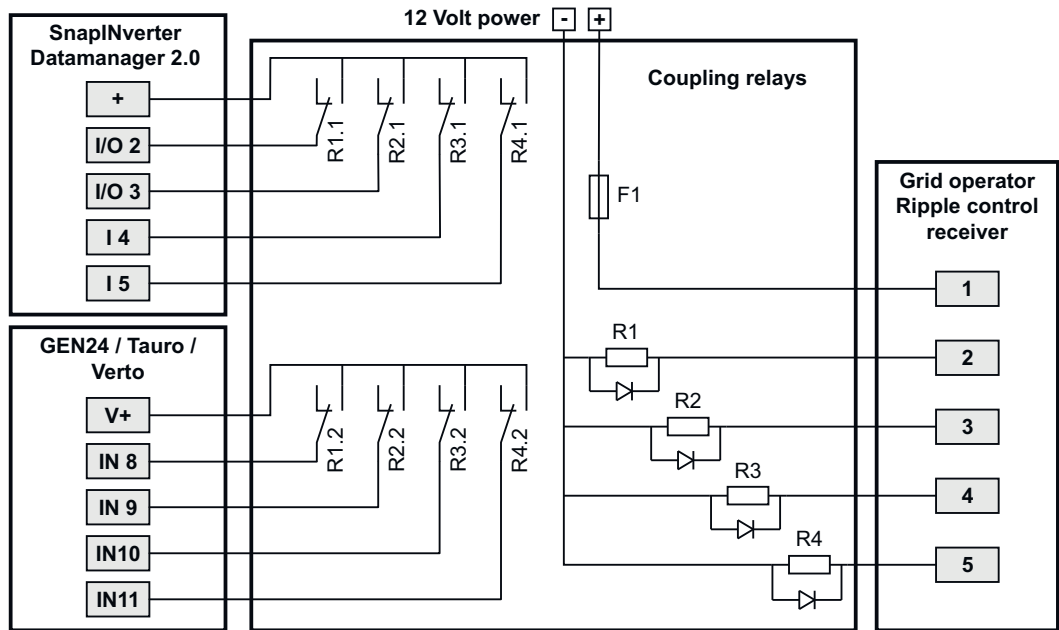

Connection diagram for ripple control receiver with several inverters

Connect the following Fronius inverters to a ripple control receiver via a distributor (coupling relay):

- Symo GEN24
- Primo GEN24
- Tauro
- Verto
- SnapINverter (only devices with Fronius Datamanager 2.0)

On the user interface of each inverter connected to the ripple control receiver, set the same parameters for I/O power management.

# Appendix



# Service, maintenance and disposal

## General

The inverter is designed so that it does not require additional maintenance work. Nevertheless, a few points must be considered during operation to ensure that the inverter works perfectly.

## Maintenance

Maintenance and service work may only be carried out by a technical specialist.

## Cleaning

Wipe the inverter, if necessary, with a damp cloth.  
Do not use cleaning agents, scouring agents, solvents, or similar products to clean the inverter.

## Operation in dusty environments


### NOTE

**If the inverter is operated in dusty environments, dirt may build up on the heat sink and fan.**


This may result in a loss of power due to insufficient cooling of the inverter.


- Make sure that the ambient air can always flow through the inverter's ventilation slots unimpeded.
- Remove any build-ups of dirt from the heat sink and the fan.

1

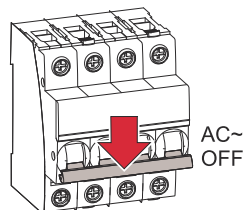

Switch off power to the inverter and wait for the capacitors to discharge (2 minutes) and the fan to shut down. Turn the DC disconnecter to the "off" switch setting.

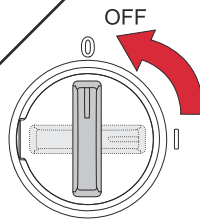

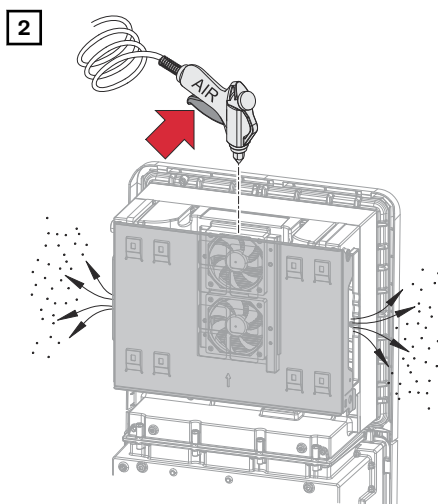

Remove any build-up of dirt on the heat sink and fan using compressed air, a cloth, or a brush.

#### NOTE

##### **Risk due to damage to the fan bearing in the event of incorrect cleaning.**

Excessive speeds and the application of pressure to the fan bearing can cause damage.

- ▶ Block the fan and clean with compressed air.
- ▶ When using a cloth or brush, clean the fan without applying any pressure.

To start up the inverter again, follow the steps listed above in reverse order.

## Safety



### WARNING

#### **Danger from mains voltage and DC voltage from PV modules.**

This can result in serious injury and damage to property.

- ▶ The connection area must only be opened by an authorized electrician.
- ▶ The separate power stage set area must only be opened by Fronius-trained service technicians.
- ▶ Prior to any connection work, disconnect the inverter on the AC side and the DC side.



### WARNING

#### **Danger due to residual voltage from capacitors.**

This can result in serious injury and damage to property.

- ▶ Allow the capacitors of the inverter to discharge (2 minutes).

## Disposal

In accordance with the EU Directive and national law, the following products must be disposed of separately and recycled:

- Waste electrical and electronic equipment
- Used batteries (portable batteries, industrial batteries)

Used equipment and batteries must be returned to the distributor or an authorized local collection system. Do not dispose of batteries with domestic waste. Protect batteries from high temperatures, direct sunlight, moisture and corrosive environments.

Arrange for the safe collection and proper disposal of damaged, leaking or used batteries by a battery recycling company or the Fronius Service Partner.

In addition, it should be noted that batteries contain substances that, if disposed of improperly, can have a significant negative impact on the environment as well as on human health and the safety of persons, in particular due to the leakage of hazardous substances such as heavy metals or electrolytes, which can contaminate soil, water and air.

This ensures environmental protection and the sustainable use of natural resources.

**Packaging materials**

- Collect separately
- Observe local regulations
- Compress the cardboard box to reduce volume

# Warranty provisions

---

## Warranty

Detailed warranty conditions specific to your country can be found at <https://www.fronius.com/en/download-center?searchword=Warranty+conditions>.

If there is a warranty for the relevant product, register the product at <https://warranty.fronius.com/> and activate or extend the warranty.

# Status codes and remedy

## Display

Status codes are displayed on the user interface of the inverter in the **System > Event Log** menu area or in the user menu under **Notifications** and in Fronius Solar.web\*.

\* If configured accordingly, see chapter [Fronius Solar.web](#) on page 19.

## Status codes

### 1030 – WSD Open (operating LED: flashes red)

**Cause:** A device that is connected in the WSD chain has interrupted the signal line (e.g., surge protection device) or the bypass installed ex works as standard has been removed and no trigger device has been installed.

**Remedy:** If the SPD surge protection device has tripped, the inverter must be repaired by an authorized specialist.

**OR:** Install the bypass installed ex works as standard or a trigger device.

**OR:** Turn the WSD (wired shutdown) switch to position 1 (WSD primary device).



#### WARNING

##### **Danger from work that is not carried out properly.**

This can result in serious injury and damage to property.

- ▶ The installation and connection of an SPD surge protection device may only be carried out by Fronius-trained service personnel in accordance with the technical specifications.
- ▶ Observe safety rules.

# Technical data

## Verto 15.0 208-240

| Input data                                                                                                |                                                         |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)                               | 1000 V <sub>DC</sub>                                    |
| Start-up input voltage                                                                                    | 150 V <sub>DC</sub>                                     |
| MPP voltage range                                                                                         | 180 - 870 V <sub>DC</sub>                               |
| Number MPP-controller                                                                                     | 4                                                       |
| Maximum input current (I <sub>DC</sub> max)<br>PV1 / PV2 / PV3 / PV4<br>per string                        | 28 / 28 / 28 / 28 A<br>28 A                             |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A                    |
| I <sub>SC</sub> PV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A                      |
| Maximum PV field power (P <sub>PV</sub> max) total<br>PV1 / PV2 / PV3 / PV4                               | 22.5 kWp<br>20 / 20 / 20 / 20 kWp                       |
| DC overvoltage category                                                                                   | 2                                                       |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                                      |
| Max. capacity of the PV generator against earth                                                           | 3000 nF                                                 |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                                   |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                                            |
| Limit value and trip time of sudden residual current monitoring (on delivery)                             | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery)                         | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>                                  | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                                           | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test                                    | -                                                       |

| Output data                                                     |                                               |
|-----------------------------------------------------------------|-----------------------------------------------|
| Grid voltage range                                              | 176 - 528 V <sub>AC</sub>                     |
| Rated grid voltage                                              | 120   127   139 V <sub>AC</sub> <sup>1)</sup> |
| Rated power                                                     | 15 kW                                         |
| Rated apparent power                                            | 15 kVA                                        |
| Rated frequency                                                 | 50 / 60 Hz <sup>1)</sup>                      |
| Maximum output current/phase                                    | 53.7 A                                        |
| Initial symmetrical short-circuit current/phase I <sub>K"</sub> | 53.7 A                                        |
| Power factor (cos phi)                                          | 0-1 ind./cap. <sup>2)</sup>                   |

| Output data                             |                                                                                                                |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Grid connection                         | 3~ (N)PE 208 / 120 V <sub>AC</sub><br>3~ (N)PE 220 / 127 V <sub>AC</sub><br>3~ (N)PE 240 / 139 V <sub>AC</sub> |
| Grounding systems                       | TT (allowed if U <sub>N-PE</sub> < 30V)<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)              |
| Maximum output power                    | 15 kW                                                                                                          |
| Nominal output power                    | 15 kW                                                                                                          |
| Rated output current / phase            | 41.7 / 39.4 / 36 A                                                                                             |
| Total harmonic distortion               | < 3%                                                                                                           |
| AC overvoltage category                 | 3                                                                                                              |
| Current (inrush) <sup>5)</sup>          | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                                        |
| Maximum output fault current / duration | 42.2 A / 29.4 ms                                                                                               |

| General data                                           |                               |
|--------------------------------------------------------|-------------------------------|
| Night-time power loss = standby consumption            | 16 W                          |
| European efficiency (180 / 525 / 870 V <sub>DC</sub> ) | 96.04 / 96.87 / 96.68%        |
| Maximum efficiency                                     | 97.50%                        |
| Protective class                                       | 1                             |
| EMC emission class                                     | B                             |
| Pollution degree                                       | 3                             |
| Permitted ambient temperature                          | - 40 °C-+60 °C                |
| Permitted storage temperature                          | - 40 °C-+70 °C                |
| Relative humidity                                      | 0-100%                        |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating                              | IP 66                         |
| Dimensions (height x width x depth)                    | 865 x 574 x 279 mm            |
| Weight                                                 | 43 kg                         |
| Inverter topology                                      | Non-insulated, no transformer |

## Verto 18.0 208-240

| Input data                                                                            |                                      |
|---------------------------------------------------------------------------------------|--------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)           | 1000 V <sub>DC</sub>                 |
| Start-up input voltage                                                                | 150 V <sub>DC</sub>                  |
| MPP voltage range                                                                     | 220 - 870 V <sub>DC</sub>            |
| Number MPP-controller                                                                 | 4                                    |
| Maximum input current (I <sub>DC</sub> max)<br>PV1 / PV2 / PV3 / PV4<br>per string    | 28 / 28 / 28 / 28 A<br>28 A          |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string | 120 A<br>40 / 40 / 40 / 40 A<br>40 A |

| Input data                                                                                                |                                                         |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| I <sub>SC</sub> PV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A                      |
| Maximum PV field power (P <sub>PV max</sub> ) total<br>PV1 / PV2 / PV3 / PV4                              | 27 kWp<br>20 / 20 / 20 / 20 kWp                         |
| DC overvoltage category                                                                                   | 2                                                       |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                                      |
| Max. capacity of the PV generator against earth                                                           | 3600 nF                                                 |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                                   |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                                            |
| Limit value and trip time of sudden residual current monitoring (on delivery)                             | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery)                         | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>                                  | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                                           | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test                                    | -                                                       |

| Output data                                                      |                                                                                                                |
|------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Grid voltage range                                               | 176 - 528 V <sub>AC</sub>                                                                                      |
| Rated grid voltage                                               | 120   127   139 V <sub>AC</sub> <sup>1)</sup>                                                                  |
| Rated power                                                      | 18 kW                                                                                                          |
| Rated apparent power                                             | 18 kVA                                                                                                         |
| Rated frequency                                                  | 50 / 60 Hz <sup>1)</sup>                                                                                       |
| Maximum output current/phase                                     | 53.7 A                                                                                                         |
| Initial symmetrical short-circuit current/phase I <sub>k</sub> " | 53.7 A                                                                                                         |
| Power factor (cos phi)                                           | 0-1 ind./cap. <sup>2)</sup>                                                                                    |
| Grid connection                                                  | 3~ (N)PE 208 / 120 V <sub>AC</sub><br>3~ (N)PE 220 / 127 V <sub>AC</sub><br>3~ (N)PE 240 / 139 V <sub>AC</sub> |
| Grounding systems                                                | TT (allowed if U <sub>N-PE</sub> < 30V)<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)              |
| Maximum output power                                             | 18 kW                                                                                                          |
| Nominal output power                                             | 18 kW                                                                                                          |
| Rated output current / phase                                     | 50 / 47.2 / 43.2 A                                                                                             |
| Total harmonic distortion                                        | < 3%                                                                                                           |
| AC overvoltage category                                          | 3                                                                                                              |
| Current (inrush) <sup>5)</sup>                                   | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                                        |
| Maximum output fault current / duration                          | 42.2 A / 29.4 ms                                                                                               |

| General data                                           |                               |
|--------------------------------------------------------|-------------------------------|
| Night-time power loss = standby consumption            | 16 W                          |
| European efficiency (220 / 545 / 870 V <sub>DC</sub> ) | 95.68 / 96.14 / 95.57%        |
| Maximum efficiency                                     | 96.49%                        |
| Protective class                                       | 1                             |
| EMC emission class                                     | B                             |
| Pollution degree                                       | 3                             |
| Permitted ambient temperature                          | - 40 °C-+60 °C                |
| Permitted storage temperature                          | - 40 °C-+70 °C                |
| Relative humidity                                      | 0-100%                        |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating                              | IP 66                         |
| Dimensions (height x width x depth)                    | 865 x 574 x 279 mm            |
| Weight                                                 | 43 kg                         |
| Inverter topology                                      | Non-insulated, no transformer |

## Verto 25.0

| Input data                                                                                                |                                                           |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)                               | 1000 V <sub>DC</sub>                                      |
| Start-up input voltage                                                                                    | 150 V <sub>DC</sub>                                       |
| MPP voltage range                                                                                         | 300 - 870 V <sub>DC</sub>                                 |
| Number MPP-controller                                                                                     | 4                                                         |
| Maximum input current (I <sub>DC</sub> max)<br>PV1 / PV2 / PV3 / PV4<br>per string                        | 28 / 28 / 28 / 28 A<br>28 A                               |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A                      |
| I <sub>SC</sub> pV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A                        |
| Maximum PV field power (P <sub>PV</sub> max) total<br>PV1 / PV2 / PV3 / PV4                               | 37.5 kW <sub>p</sub><br>20 / 20 / 20 / 20 kW <sub>p</sub> |
| DC overvoltage category                                                                                   | 2                                                         |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                                        |
| Max. capacity of the PV generator against earth                                                           | 5000 nF                                                   |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                                     |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                                              |
| Limit value and trip time of sudden residual current monitoring (on delivery)                             | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms   |
| Limit value and trip time of continuous residual current monitoring (on delivery)                         | 300 / 300 mA / ms                                         |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>                                  | 30 - 1000 mA                                              |
| Cyclical repetition of insulation resistance test (on delivery)                                           | 24 h                                                      |

| Input data                                                             |   |
|------------------------------------------------------------------------|---|
| Adjustable range for cyclical repetition of insulation resistance test | - |

| Output data                                                      |                                                                                                                                                      |
|------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid voltage range                                               | 176 - 528 V <sub>AC</sub>                                                                                                                            |
| Rated grid voltage                                               | 220   230   254   277 V <sub>AC</sub> <sup>1)</sup>                                                                                                  |
| Rated power                                                      | 25 kW                                                                                                                                                |
| Rated apparent power                                             | 25 kVA                                                                                                                                               |
| Rated frequency                                                  | 50 / 60 Hz <sup>1)</sup>                                                                                                                             |
| Rated output current / phase                                     | 53.7 A                                                                                                                                               |
| Initial symmetrical short-circuit current/phase I <sub>k</sub> " | 53.7 A                                                                                                                                               |
| Power factor (cos phi)                                           | 0-1 ind./cap. <sup>2)</sup>                                                                                                                          |
| Grid connection                                                  | 3~ (N)PE 380 / 220 V <sub>AC</sub><br>3~ (N)PE 400 / 230 V <sub>AC</sub><br>3~ (N)PE 440 / 254 V <sub>AC</sub><br>3~ (N)PE 480 / 277 V <sub>AC</sub> |
| Grounding systems                                                | TT (allowed if U <sub>N-PE</sub> < 30V)<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)                                                    |
| Maximum output power                                             | 25 kW                                                                                                                                                |
| Nominal output power                                             | 25 kW                                                                                                                                                |
| Rated output current / phase                                     | 37.9 / 36.2 / 32.8 / 30.1 A                                                                                                                          |
| Total harmonic distortion                                        | < 3%                                                                                                                                                 |
| AC overvoltage category                                          | 3                                                                                                                                                    |
| Current (inrush) <sup>5)</sup>                                   | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                                                                              |
| Maximum output fault current / duration                          | 42.2 A / 29.4 ms                                                                                                                                     |

| General data                                           |                               |
|--------------------------------------------------------|-------------------------------|
| Night-time power loss = standby consumption            | 16 W                          |
| European efficiency (300 / 585 / 870 V <sub>DC</sub> ) | 97.04 / 97.35 / 97.36%        |
| Maximum efficiency                                     | 97.74%                        |
| Protective class                                       | 1                             |
| EMC emission class                                     | B                             |
| Pollution degree                                       | 3                             |
| Permitted ambient temperature                          | - 40 °C-+60 °C                |
| Permitted storage temperature                          | - 40 °C-+70 °C                |
| Relative humidity                                      | 0-100%                        |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating                              | IP 66                         |
| Dimensions (height x width x depth)                    | 865 x 574 x 279 mm            |
| Weight                                                 | 43 kg                         |
| Inverter topology                                      | Non-insulated, no transformer |

| Protective devices                                                |                                                                                                                                                                                                                |
|-------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DC disconnect                                                     | Integrated                                                                                                                                                                                                     |
| Cooling principle                                                 | Controlled forced-air ventilation                                                                                                                                                                              |
| RCMU <sup>9)</sup>                                                | Integrated                                                                                                                                                                                                     |
| RCMU classification                                               | The software class of the safety platform(s) is defined as a class B control function (single-channel with periodic self-test) in accordance with IEC 60730 Annex H.                                           |
| DC isolation measurement <sup>9)</sup>                            | integrated <sup>2)</sup>                                                                                                                                                                                       |
| Overload performance                                              | Operating point shift<br>power limitation                                                                                                                                                                      |
| Active anti-islanding method                                      | Frequency point shift method                                                                                                                                                                                   |
| AFCI                                                              | Integrated                                                                                                                                                                                                     |
| AFPE (AFCI) classification (according to IEC 63027) <sup>9)</sup> | F-I-AFPE-1-4/4-2<br>Full coverage<br>Integrated<br>AFPE<br>1 monitored string per input port<br>4/4 input ports per channel<br>(AFPE1 for MPP1 & MPP2: 4,<br>AFPE2 for MPP3 & MPP4: 4)<br>2 monitored channels |

## Verto 27.0

| Input data                                                                                                |                                      |
|-----------------------------------------------------------------------------------------------------------|--------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)                               | 1000 V <sub>DC</sub>                 |
| Start-up input voltage                                                                                    | 150 V <sub>DC</sub>                  |
| MPP voltage range                                                                                         | 330 - 870 V <sub>DC</sub>            |
| Number MPP-controller                                                                                     | 4                                    |
| Maximum input current (I <sub>DC max</sub> )<br>PV1 / PV2 / PV3 / PV4<br>per string                       | 28 / 28 / 28 / 28 A<br>28 A          |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A |
| I <sub>SC PV</sub> <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A   |
| Maximum PV field power (P <sub>PV max</sub> ) total<br>PV1 / PV2 / PV3 / PV4                              | 40.5 kWp<br>20 / 20 / 20 / 20 kWp    |
| DC overvoltage category                                                                                   | 2                                    |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                   |
| Max. capacity of the PV generator against earth                                                           | 5400 nF                              |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                         |

| Input data                                                                        |                                                         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------|
| Limit value and trip time of sudden residual current monitoring (on delivery)     | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery) | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>          | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                   | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test            | -                                                       |

| Output data                                                      |                                                                                                                                                      |
|------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid voltage range                                               | 176 - 528 V <sub>AC</sub>                                                                                                                            |
| Rated grid voltage                                               | 220   230   254   277 V <sub>AC</sub> <sup>1)</sup>                                                                                                  |
| Rated power                                                      | 27 kW                                                                                                                                                |
| Rated apparent power                                             | 27 kVA                                                                                                                                               |
| Rated frequency                                                  | 50 / 60 Hz <sup>1)</sup>                                                                                                                             |
| Maximum output current/phase                                     | 53.7 A                                                                                                                                               |
| Initial symmetrical short-circuit current/phase I <sub>k</sub> " | 53.7 A                                                                                                                                               |
| Power factor (cos phi)                                           | 0-1 ind./cap. <sup>2)</sup>                                                                                                                          |
| Grid connection                                                  | 3~ (N)PE 380 / 220 V <sub>AC</sub><br>3~ (N)PE 400 / 230 V <sub>AC</sub><br>3~ (N)PE 440 / 254 V <sub>AC</sub><br>3~ (N)PE 480 / 277 V <sub>AC</sub> |
| Grounding systems                                                | TT (allowed if U <sub>N-PE</sub> < 30V)<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)                                                    |
| Maximum output power                                             | 27 kW                                                                                                                                                |
| Nominal output power                                             | 27 kW                                                                                                                                                |
| Rated output current / phase                                     | 40.9 A / 39.1 / 35.4 / 32.5 A                                                                                                                        |
| Total harmonic distortion                                        | < 3%                                                                                                                                                 |
| AC overvoltage category                                          | 3                                                                                                                                                    |
| Current (inrush) <sup>5)</sup>                                   | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                                                                              |
| Maximum output fault current / duration                          | 42.2 A / 29.4 ms                                                                                                                                     |

| General data                                           |                        |
|--------------------------------------------------------|------------------------|
| Night-time power loss = standby consumption            | 16 W                   |
| European efficiency (330 / 600 / 870 V <sub>DC</sub> ) | 97.09 / 97.79 / 97.40% |
| Maximum efficiency                                     | 98.03%                 |
| Protective class                                       | 1                      |
| EMC emission class                                     | B                      |
| Pollution degree                                       | 3                      |
| Permitted ambient temperature                          | - 40 °C-+60 °C         |
| Permitted storage temperature                          | - 40 °C-+70 °C         |
| Relative humidity                                      | 0-100%                 |

| General data                        |                               |
|-------------------------------------|-------------------------------|
| Sound pressure level                | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating           | IP 66                         |
| Dimensions (height x width x depth) | 865 x 574 x 279 mm            |
| Weight                              | 43 kg                         |
| Inverter topology                   | Non-insulated, no transformer |

## Verto 30.0

| Input data                                                                                                |                                                         |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)                               | 1000 V <sub>DC</sub>                                    |
| Start-up input voltage                                                                                    | 150 V <sub>DC</sub>                                     |
| MPP voltage range                                                                                         | 360 - 870 V <sub>DC</sub>                               |
| Number MPP-controller                                                                                     | 4                                                       |
| Maximum input current (I <sub>DC</sub> max)<br>PV1 / PV2 / PV3 / PV4<br>per string                        | 28 / 28 / 28 / 28 A<br>28 A                             |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A                    |
| I <sub>SC</sub> PV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A                      |
| Maximum PV field power (P <sub>PV</sub> max) total<br>PV1 / PV2 / PV3 / PV4                               | 45 kWp<br>20 / 20 / 20 / 20 kWp                         |
| DC overvoltage category                                                                                   | 2                                                       |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                                      |
| Max. capacity of the PV generator against earth                                                           | 6000 nF                                                 |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                                   |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                                            |
| Limit value and trip time of sudden residual current monitoring (on delivery)                             | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery)                         | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>                                  | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                                           | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test                                    | -                                                       |

| Output data          |                                                     |
|----------------------|-----------------------------------------------------|
| Grid voltage range   | 176 - 528 V <sub>AC</sub>                           |
| Rated grid voltage   | 220   230   254   277 V <sub>AC</sub> <sup>1)</sup> |
| Rated power          | 29.99 kW                                            |
| Rated apparent power | 29.99 kVA                                           |
| Rated frequency      | 50 / 60 Hz <sup>1)</sup>                            |

| Output data                                               |                                                                                                                                                      |
|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum output current/phase                              | 53.7 A                                                                                                                                               |
| Initial symmetrical short-circuit current/phase $I_{K''}$ | 53.7 A                                                                                                                                               |
| Power factor (cos phi)                                    | 0-1 ind./cap. <sup>2)</sup>                                                                                                                          |
| Grid connection                                           | 3~ (N)PE 380 / 220 V <sub>AC</sub><br>3~ (N)PE 400 / 230 V <sub>AC</sub><br>3~ (N)PE 440 / 254 V <sub>AC</sub><br>3~ (N)PE 480 / 270 V <sub>AC</sub> |
| Grounding systems                                         | TT (allowed if $U_{N-PE} < 30V$ )<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)                                                          |
| Maximum output power                                      | 29.99 kW                                                                                                                                             |
| Nominal output power                                      | 29.99 kW                                                                                                                                             |
| Rated output current / phase                              | 45.5 / 43.5 / 39.4 / 36.1 A                                                                                                                          |
| Total harmonic distortion                                 | < 3%                                                                                                                                                 |
| AC overvoltage category                                   | 3                                                                                                                                                    |
| Current (inrush) <sup>5)</sup>                            | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                                                                              |
| Maximum output fault current / duration                   | 42.2 A / 29.4 ms                                                                                                                                     |

| General data                                           |                               |
|--------------------------------------------------------|-------------------------------|
| Night-time power loss = standby consumption            | 16 W                          |
| European efficiency (360 / 615 / 870 V <sub>DC</sub> ) | 97.25 / 97.80 / 97.45%        |
| Maximum efficiency                                     | 98.02%                        |
| Protective class                                       | 1                             |
| EMC emission class                                     | B                             |
| Pollution degree                                       | 3                             |
| Permitted ambient temperature                          | - 40 °C-+60 °C                |
| Permitted storage temperature                          | - 40 °C-+70 °C                |
| Relative humidity                                      | 0-100%                        |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating                              | IP 66                         |
| Dimensions (height x width x depth)                    | 865 x 574 x 279 mm            |
| Weight                                                 | 43 kg                         |
| Inverter topology                                      | Non-insulated, no transformer |

### Verto 33.3

| Input data                                                                  |                           |
|-----------------------------------------------------------------------------|---------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit) | 1000 V <sub>DC</sub>      |
| Start-up input voltage                                                      | 150 V <sub>DC</sub>       |
| MPP voltage range                                                           | 400 - 870 V <sub>DC</sub> |
| Number MPP-controller                                                       | 4                         |

| Input data                                                                                                |                                                         |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Maximum input current ( $I_{DC \max}$ )<br>PV1 / PV2 / PV3 / PV4<br>per string                            | 28 / 28 / 28 / 28 A<br>28 A                             |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A                    |
| ISC PV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                                       | 150 A<br>50 A / 50 A / 50 A / 50 A                      |
| Maximum PV field power (P <sub>PV max</sub> ) Total<br>PV1 / PV2 / PV3 / PV4                              | 50 kWp<br>20 / 20 / 20 / 20 kWp                         |
| DC overvoltage category                                                                                   | 2                                                       |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                                      |
| Max. capacity of the PV generator against earth                                                           | 6660 nF                                                 |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 k $\Omega$                                           |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 k $\Omega$                                    |
| Limit value and trip time of sudden residual current monitoring (on delivery)                             | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery)                         | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>                                  | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                                           | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test                                    | -                                                       |

| Output data                                               |                                                                                                                                                      |
|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grid voltage range                                        | 176 - 528 V <sub>AC</sub>                                                                                                                            |
| Rated grid voltage                                        | 220   230   254   277 V <sub>AC</sub> <sup>1)</sup>                                                                                                  |
| Rated power                                               | 33.3 kW                                                                                                                                              |
| Rated apparent power                                      | 33.3 kVA                                                                                                                                             |
| Rated frequency                                           | 50 / 60 Hz <sup>1)</sup>                                                                                                                             |
| Maximum output current/phase                              | 53.7 A                                                                                                                                               |
| Initial symmetrical short-circuit current/phase $I_{K''}$ | 53.7 A                                                                                                                                               |
| Power factor (cos phi)                                    | 0-1 ind./cap. <sup>2)</sup>                                                                                                                          |
| Grid connection                                           | 3~ (N)PE 380 / 220 V <sub>AC</sub><br>3~ (N)PE 400 / 230 V <sub>AC</sub><br>3~ (N)PE 440 / 254 V <sub>AC</sub><br>3~ (N)PE 480 / 277 V <sub>AC</sub> |
| Maximum output power                                      | 33.3 kW                                                                                                                                              |
| Grounding systems                                         | TT (allowed if $U_{N-PE} < 30V$ )<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed)                                                          |
| Nominal output power                                      | 33.3 kW                                                                                                                                              |
| Rated output current / phase                              | 50.5 / 48.3 / 43.7 / 40.1 A                                                                                                                          |
| Total harmonic distortion                                 | < 3%                                                                                                                                                 |

| Output data                             |                                                         |
|-----------------------------------------|---------------------------------------------------------|
| AC overvoltage category                 | 3                                                       |
| Current (inrush) <sup>5)</sup>          | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup> |
| Maximum output fault current / duration | 42.2 A / 29.4 ms                                        |

| General data                                           |                               |
|--------------------------------------------------------|-------------------------------|
| Night-time power loss = standby consumption            | 16 W                          |
| European efficiency (400 / 635 / 870 V <sub>DC</sub> ) | 97.23 / 97.76 / 97.47%        |
| Maximum efficiency                                     | 97.98%                        |
| Protective class                                       | 1                             |
| EMC emission class                                     | B                             |
| Pollution degree                                       | 3                             |
| Permitted ambient temperature                          | - 40 °C-+60 °C                |
| Permitted storage temperature                          | - 40 °C-+70 °C                |
| Relative humidity                                      | 0-100%                        |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPA)      |
| Ingress protection rating                              | IP 66                         |
| Dimensions (height x width x depth)                    | 865 x 574 x 279 mm            |
| Weight                                                 | 43 kg                         |
| Inverter topology                                      | Non-insulated, no transformer |

## Verto 36.0 480

| Input data                                                                                                |                                      |
|-----------------------------------------------------------------------------------------------------------|--------------------------------------|
| Max. input voltage<br>(at 1000 W/m <sup>2</sup> /-10 °C in an open circuit)                               | 1000 V <sub>DC</sub>                 |
| Start-up input voltage                                                                                    | 150 V <sub>DC</sub>                  |
| MPP voltage range                                                                                         | 440 - 870 V <sub>DC</sub>            |
| Number MPP-controller                                                                                     | 4                                    |
| Maximum input current (I <sub>DC</sub> max)<br>PV1 / PV2 / PV3 / PV4<br>per string                        | 28 / 28 / 28 / 28 A<br>28 A          |
| Max. short circuit current <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4<br>per string                     | 120 A<br>40 / 40 / 40 / 40 A<br>40 A |
| I <sub>SC</sub> PV <sup>8)</sup> total<br>PV1 / PV2 / PV3 / PV4                                           | 150 A<br>50 A / 50 A / 50 A / 50 A   |
| Maximum PV field power (P <sub>PV</sub> max) total<br>PV1 / PV2 / PV3 / PV4                               | 50 kWp<br>20 / 20 / 20 / 20 kWp      |
| DC overvoltage category                                                                                   | 2                                    |
| Max. inverter backfeed current to the array <sup>3)</sup>                                                 | 50 A <sup>4)</sup>                   |
| Max. capacity of the PV generator against earth                                                           | 7200 nF                              |
| Limit value of the insulation resistance test between module array and ground (on delivery) <sup>7)</sup> | 34 kΩ                                |
| Adjustable range of the insulation resistance test between module array and ground <sup>6)</sup>          | 34-10,000 kΩ                         |

| Input data                                                                        |                                                         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------|
| Limit value and trip time of sudden residual current monitoring (on delivery)     | 30 / 300 mA / ms<br>60 / 150 mA / ms<br>90 / 40 mA / ms |
| Limit value and trip time of continuous residual current monitoring (on delivery) | 300 / 300 mA / ms                                       |
| Adjustable range of continuous residual current monitoring <sup>6)</sup>          | 30 - 1000 mA                                            |
| Cyclical repetition of insulation resistance test (on delivery)                   | 24 h                                                    |
| Adjustable range for cyclical repetition of insulation resistance test            | -                                                       |

| Output data                                                      |                                                                                                   |
|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Grid voltage range                                               | 176 - 528 V <sub>AC</sub>                                                                         |
| Rated grid voltage                                               | 254 V <sub>AC</sub>   277 V <sub>AC</sub> <sup>1)</sup>                                           |
| Rated power                                                      | 36 kW                                                                                             |
| Rated apparent power                                             | 36 kVA                                                                                            |
| Rated frequency                                                  | 50 / 60 Hz <sup>1)</sup>                                                                          |
| Maximum output current/phase                                     | 53.7 A                                                                                            |
| Initial symmetrical short-circuit current/phase I <sub>k</sub> " | 53.7 A                                                                                            |
| Power factor (cos phi)                                           | 0-1 ind./cap. <sup>2)</sup>                                                                       |
| Grid connection                                                  | 3~ (N)PE 440 / 254 V <sub>AC</sub><br>3~ (N)PE 480 / 277 V <sub>AC</sub>                          |
| Grounding systems                                                | TT (allowed if U <sub>N-PE</sub> < 30V)<br>TN-S (allowed)<br>TN-C-S (allowed)<br>IT (not allowed) |
| Maximum output power                                             | 36 kW                                                                                             |
| Nominal output power                                             | 36 kW                                                                                             |
| Rated output current / phase                                     | 47.2 A / 43.3 A                                                                                   |
| Total harmonic distortion                                        | < 3%                                                                                              |
| AC overvoltage category                                          | 3                                                                                                 |
| Current (inrush) <sup>5)</sup>                                   | 24.72 A peak /<br>6.82 A rms over 1.99 ms <sup>4)</sup>                                           |
| Maximum output fault current / duration                          | 42.2 A / 29.4 ms                                                                                  |

| General data                                           |                          |
|--------------------------------------------------------|--------------------------|
| Night-time power loss = standby consumption            | 16 W                     |
| European efficiency (440 / 655 / 870 V <sub>DC</sub> ) | 97.47 / 97.72 / 97.85%   |
| Maximum efficiency                                     | 98.13%                   |
| Protective class                                       | 1                        |
| EMC emission class                                     | B                        |
| Pollution degree                                       | 3                        |
| Permitted ambient temperature                          | - 40 °C-+60 °C           |
| Permitted storage temperature                          | - 40 °C-+70 °C           |
| Relative humidity                                      | 0-100%                   |
| Sound pressure level                                   | 54.6 dB(A) (ref. 20 µPa) |
| Ingress protection rating                              | IP 66                    |

| General data                        |                               |
|-------------------------------------|-------------------------------|
| Dimensions (height x width x depth) | 865 x 574 x 279 mm            |
| Weight                              | 43 kg                         |
| Inverter topology                   | Non-insulated, no transformer |

## Protection devices

|                                                                   |                                                                                                                                                                                                          |
|-------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DC disconnect                                                     | Integrated                                                                                                                                                                                               |
| Cooling principle                                                 | Controlled forced-air ventilation                                                                                                                                                                        |
| RCMU <sup>9)</sup>                                                | Integrated                                                                                                                                                                                               |
| RCMU classification                                               | The software class of the safety platform(s) is defined as a class B control function (single-channel with periodic self-test) in accordance with IEC 60730 Annex H.                                     |
| DC isolation measurement <sup>9)</sup>                            | integrated <sup>2)</sup>                                                                                                                                                                                 |
| Overload performance                                              | Operating point shift<br>Power limitation                                                                                                                                                                |
| Active anti-islanding method                                      | Frequency point shift method                                                                                                                                                                             |
| AFCI                                                              | optional                                                                                                                                                                                                 |
| AFPE (AFCI) classification (according to IEC 63027) <sup>9)</sup> | F-I-AFPE-1-4/4-2<br>Full coverage<br>Integrated<br>AFPE<br>1 monitored string per input port<br>4/4 input ports per channel (AFPE1 for MPP1 & MPP2: 4, AFPE2 for MPP3 & MPP4: 4)<br>2 monitored channels |

## WLAN

|                       |                                                                                                                                                                                                |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Frequency range       | 2412 - 2462 MHz                                                                                                                                                                                |
| Channels / power used | Channel: 1-11 b,g,n HT20<br>Channel: 3-9 HT40<br><18 dBm                                                                                                                                       |
| Modulation            | 802.11b: DSSS (1Mbps DBPSK, 2Mbps DQPSK, 5.5/11Mbps CCK)<br>802.11g: OFDM (6/9Mbps BPSK, 12/18Mbps QPSK, 24/36Mbps 16-QAM, 48/54Mbps 64-QAM)<br>802.11n: OFDM (6.5 BPSK, QPSK, 16-QAM, 64-QAM) |

## Data communication

|                                                                                     |                                                                        |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| WiFi SMA-RP connection<br>( <b>FCC ID:</b> QKWPILOT1 / <b>IC ID:</b> 12270A-PILOT1) | 802.11b/g/n (WPA, WPA2)<br>Frequency: 2.4 GHz                          |
| Ethernet (LAN)                                                                      | RJ 45, 10/100 Mbit                                                     |
| Wired shutdown (WSD)                                                                | Max. 28 devices/WSD chain<br>Max. distance between two devices = 100 m |
| Modbus RTU SunSpec (2x)                                                             | RS485 2-wire                                                           |

|                                                       |                                                               |
|-------------------------------------------------------|---------------------------------------------------------------|
| Battery connection (only for Verto Plus devices)      | Modbus O / RJ 45 / 12 V power supply                          |
| Voltage level of digital inputs                       | Low: min. 0 V-max. 1.8 V<br>High: min. 4.5 V-max. 28.8 V      |
| Input currents of digital inputs                      | depending on the input voltage;<br>input resistance = 70 kOhm |
| Total power for digital output (with internal supply) | 6 W at 12 V                                                   |
| Power per digital output (with external supply)       | 1 A at >12.5 V - 24 V<br>(max. 3 A in total)                  |
| Datalogger/web server                                 | Integrated                                                    |

**Surge protection device DC Verto 25.0-27.0 SPD type 1+2**

| General data                                                                |          |
|-----------------------------------------------------------------------------|----------|
| Continuous operating current ( $I_{CPV}$ )                                  | < 0.1 mA |
| Nominal discharge current ( $I_N$ )<br>- 15 x 8/20 $\mu$ s pulses           | 20 kA    |
| Lightning surge current ( $I_{imp}$ )<br>Max. Conductivity @ 10/350 $\mu$ s | 5 kA     |
| Protection level ( $U_P$ )<br>(star configuration)                          | 3.6 kV   |
| Short circuit resistance PV ( $I_{SCPv}$ )                                  | 15 kA    |

| Disconnecter         |            |
|----------------------|------------|
| Thermal disconnector | Integrated |
| External fuse        | None       |

| Mechanical properties              |                                  |
|------------------------------------|----------------------------------|
| Disconnection indicator            | Mechanical indicator (red)       |
| Remote indication of disconnection | Output at the changeover contact |
| Housing material                   | Thermoplastic UL-94-V0           |
| Test standards                     | IEC 61643-31 / EN 61643-31       |

**Surge protection device DC Verto 25.0 - 27.0 SPD type 2**

| General data                                                    |          |
|-----------------------------------------------------------------|----------|
| Continuous operating current ( $I_{CPV}$ )                      | < 0.1 mA |
| Rated discharge current ( $I_N$ )<br>- 15 x 8/20 $\mu$ s pulses | 20 kA    |
| Protection level ( $U_P$ )<br>(star-shaped mounting)            | 3.6 kV   |
| Short circuit strength PV ( $I_{SCPv}$ )                        | 15 kA    |

| Disconnecter         |            |
|----------------------|------------|
| Thermal disconnector | Integrated |
| External fuse        | None       |

| Mechanical properties                               |                                  |
|-----------------------------------------------------|----------------------------------|
| Disconnection indicator                             | Mechanical indicator (red)       |
| Remote communication of the connection interruption | Output on the changeover contact |
| Housing material                                    | Thermoplastic UL-94-V0           |
| Test standards                                      | IEC 61643-31 / EN 61643-31       |

**Surge protection device DC Verto 30.0 - 33.3 SPD type 1+2**

| General data                                                    |       |
|-----------------------------------------------------------------|-------|
| Rated discharge current ( $I_n$ )<br>- 15 x 8/20 $\mu$ s pulses | 20 kA |
| Protection level ( $U_p$ )<br>(star-shaped mounting)            | 4 kV  |
| Short circuit strength PV ( $I_{scpv}$ )                        | 9 kA  |

| Disconnecter         |            |
|----------------------|------------|
| Thermal disconnector | Integrated |
| External fuse        | None       |

| Mechanical properties                               |                                  |
|-----------------------------------------------------|----------------------------------|
| Disconnection indicator                             | Mechanical indicator (not green) |
| Remote communication of the connection interruption | Output on the changeover contact |
| Housing material                                    | Thermoplastic UL-94-V0           |
| Test standards                                      | IEC 61643-31 / EN 61643-31       |

**Surge protection device DC Verto 30.0 - 33.3 SPD type 2**

| General data                                                                      |          |
|-----------------------------------------------------------------------------------|----------|
| Rated discharge current ( $I_n$ )<br>- 15 x 8/20 $\mu$ s pulses                   | 20 kA    |
| Lightning surge current ( $I_{imp}$ )<br>Max. discharge capacity @ 10/350 $\mu$ s | 5 kA     |
| Protection level ( $U_p$ )<br>(star-shaped mounting)                              | 4,000 kV |
| Short circuit strength PV ( $I_{scpv}$ )                                          | 9 kA     |

| Disconnecter         |            |
|----------------------|------------|
| Thermal disconnector | Integrated |
| External fuse        | None       |

| Mechanical properties                               |                                  |
|-----------------------------------------------------|----------------------------------|
| Disconnection indicator                             | Mechanical indicator (not green) |
| Remote communication of the connection interruption | Output on the changeover contact |
| Housing material                                    | Thermoplastic UL-94-V0           |

## Mechanical properties

Test standards

IEC 61643-31 / EN 61643-31

### Explanation of footnotes

- 1) The values provided are standard values. If required, the inverter is customized for a specific country.
- 2) Depending on the country setup or device-specific settings (ind. = inductive; cap. = capacitive)
- 3) Maximum current from a defective PV module to all other PV modules. From the inverter itself to the PV side of the inverter, this is 0 amperes.
- 4) Assured by the electrical design of the inverter
- 5) Peak current when turning on the inverter
- 6) The values provided are standard values. These values must be adjusted according to requirements and PV output.
- 7) The value provided is a maximum value. If this value is exceeded, this may impair the function.
- 8)  $I_{SC\ PV} = I_{SC\ max} \geq I_{SC\ (STC)} \times 1.25$  acc. to e.g.: IEC 60364-7-712, NEC 2020, AS/NZS 5033:2021
- 9) Software class B (single-channel with periodic self-test) according to IEC 60730-1 Appendix H.
- 10) Max. power that can be used in parallel for the output power (AC) and the battery charging power (DC).

### Integrated DC disconnect

| General data                                        |                                                         |
|-----------------------------------------------------|---------------------------------------------------------|
| Product name                                        | Benedict LS32 E 7905                                    |
| Rated insulation voltage                            | 1000 V <sub>DC</sub>                                    |
| Rated impulse withstand voltage                     | 8 kV                                                    |
| Suitability for insulation                          | Yes, DC only                                            |
| Utilization category and/or PV utilization category | according to IEC/EN 60947-3 utilization category DC-PV2 |
| Rated short-time withstand current ( $I_{CW}$ )     | Rated short-time withstand current ( $I_{CW}$ ): 1000 A |
| Rated short-circuit capacity ( $I_{CM}$ )           | Rated short-circuit capacity ( $I_{CM}$ ): 1000 A       |

| Rated operating current and rated breaking capacity |                                   |                            |                                   |                            |
|-----------------------------------------------------|-----------------------------------|----------------------------|-----------------------------------|----------------------------|
| Rated operating voltage ( $U_E$ )                   | Rated operating current ( $I_E$ ) | $I_{(make)} / I_{(break)}$ | Rated operating current ( $I_E$ ) | $I_{(make)} / I_{(break)}$ |
| $\leq 500\ V_{DC}$                                  | 14 A                              | 56 A                       | 36 A                              | 144 A                      |
| 600 V <sub>DC</sub>                                 | 8 A                               | 32 A                       | 30 A                              | 120 A                      |
| 700 V <sub>DC</sub>                                 | 3 A                               | 12 A                       | 26 A                              | 88 A                       |
| 800 V <sub>DC</sub>                                 | 3 A                               | 12 A                       | 17 A                              | 68 A                       |
| 900 V <sub>DC</sub>                                 | 2 A                               | 8 A                        | 12 A                              | 48 A                       |
| 1000 V <sub>DC</sub>                                | 2 A                               | 8 A                        | 6 A                               | 24 A                       |
| Number of pins                                      | 1                                 | 1                          | 2                                 | 2                          |







[fronius.com/en/solar-energy/installers-partners/products-solutions/monitoring-digital-tools](https://fronius.com/en/solar-energy/installers-partners/products-solutions/monitoring-digital-tools)

MONITORING &  
DIGITAL TOOLS

**Fronius International GmbH**

Froniusstraße 1  
4643 Pettenbach  
Austria  
[contact@fronius.com](mailto:contact@fronius.com)  
[www.fronius.com](http://www.fronius.com)

At [www.fronius.com/contact](http://www.fronius.com/contact) you will find the contact details  
of all Fronius subsidiaries and Sales & Service Partners.